

Quick Installation Guide

Cloud-Managed Wireless Ceiling Access Point



Wi-AP217-Lite | Wi-AP218AX-Lite
Hardware Version: V2.0

1. Packing Content



1 x AP



4 x Plastic Anchor



4 x Self-Tapping Screws




1 x Ethernet Cable



1 x Quick Installation Guide

2. Appearance Overview

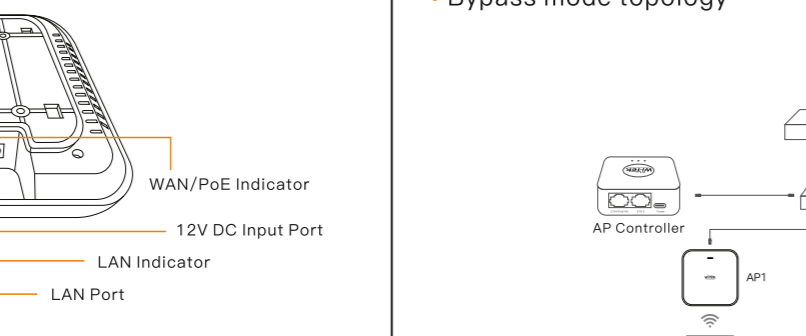

• LED Indicator


LED Indicators	Status	Description
System Indicator	Off	The device is powered off.
System Indicator	On	The system is working normally.
LAN Indicator	Off	The LAN port is disconnected.
LAN Indicator	On	The LAN port is connected via Ethernet cable.
WAN/PoE Indicator	Off	The port is disconnected.
WAN/PoE Indicator	On	The port is connected via Ethernet cable.

• Port and Button


Port&Button	Description
RESET	Reset button, which is used to restore the factory. Holding down the reset button for 10 seconds to revert to factory settings.
WAN/PoE	10/100/1000Mbps Base-T Ethernet Port, which supports 802.3af/at PoE Input. If the AP is powered through PoE, please connect this port to the PoE switch supporting 802.3af output. It is generally connected to the upstream switch.
LAN	10/100/1000Mbps Base-T Ethernet port. It is generally connected to wired LAN devices such as PC.
DC	DC Input: 12V 1A The AP is powered through 12V DC Input.

3. Typical Connection

• Bypass mode topology

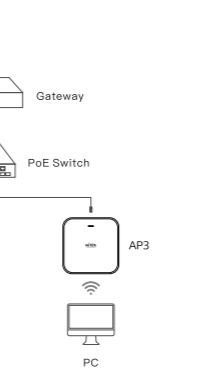


• AC Gateway mode topology

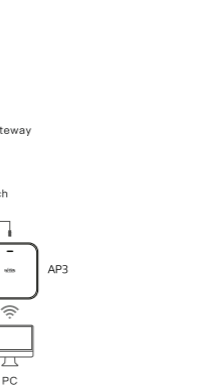


4. Device Installation

• Ceiling Mounting

- 1. Place the bracket in the center of the ceiling and then mark the positions for the screw holes and the position for Ethernet cable.

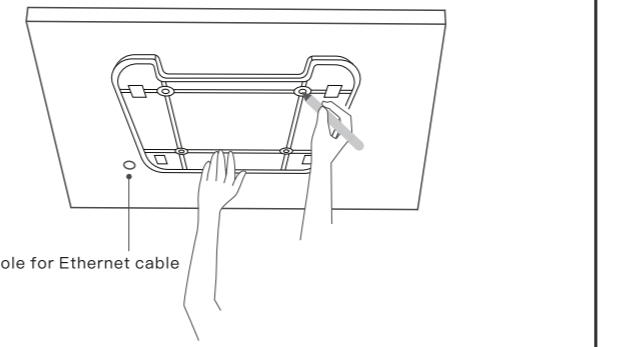


• Drill holes in the marked positions using a hammer drill.

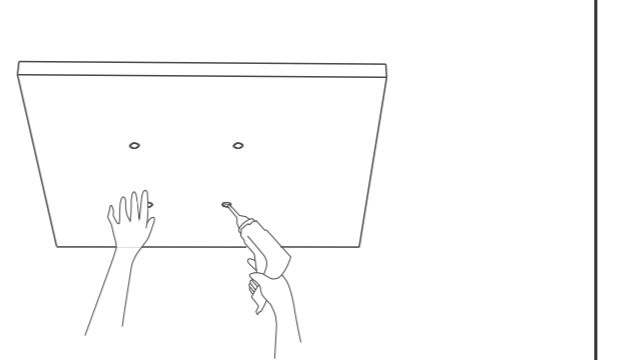

5. Power Supply


• Power via PSE Device

- The APs can be powered via PoE switch which supports 802.3af PoE output.

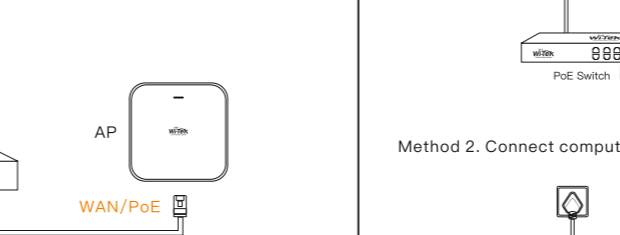

• Power via Power adapter

- Some APs can be powered via power adapter which supports 12V DC output.

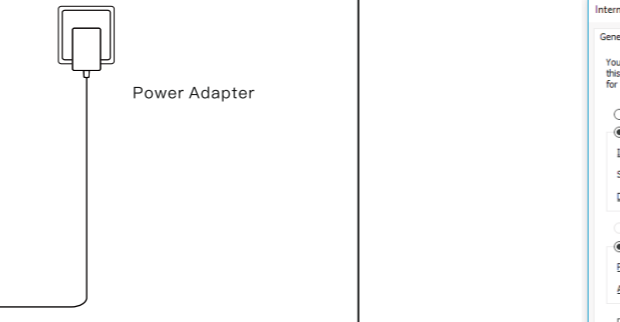


6. Configuration Method


Method 1. Connect computer to the wireless signal of AP, the default SSID is "Wi-TEK xxxx". Password is 88888888



Method 2. Connect computer to the AP by Ethernet cable.

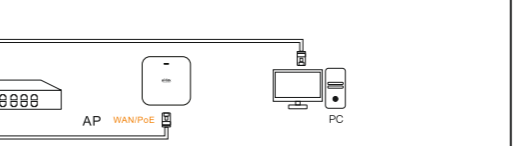


Step 1. On the computer, please set the static IP under the same subnet with AP, 192.168.1.xx

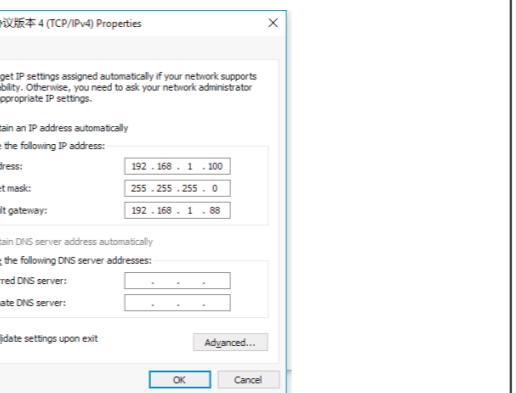


7. Cloud Management


Step 2. Please launch a browser such as Google Chrome or Firefox, type 192.168.1.88 into address bar and click on enter to get in the login page of wireless access point. Set the new password.

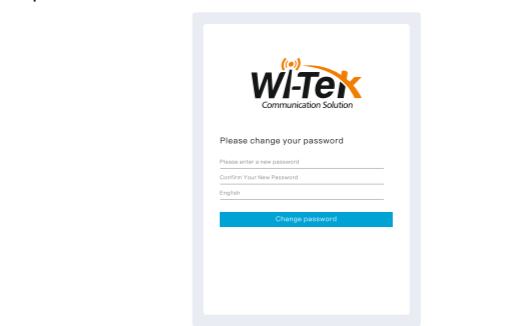

Step 3. After get in the management page, On the left side menu, please go to [Wireless] to setup the access point.

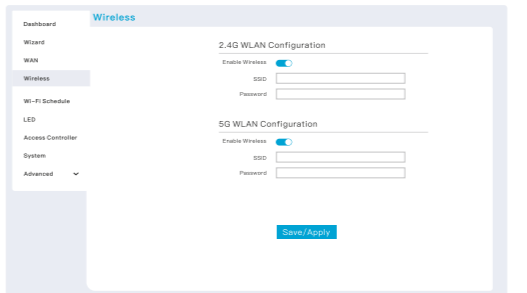


• Fit AP Mode default Login IP: 192.168.1.88

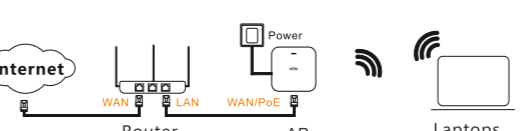


7. Cloud Management

*Note: Please ensure the device is connected to the Internet before binding the device to cloud.

- Go into the APP UI and click "+" on the right bottom of the screen. Then fill in the information to finish creating the project.

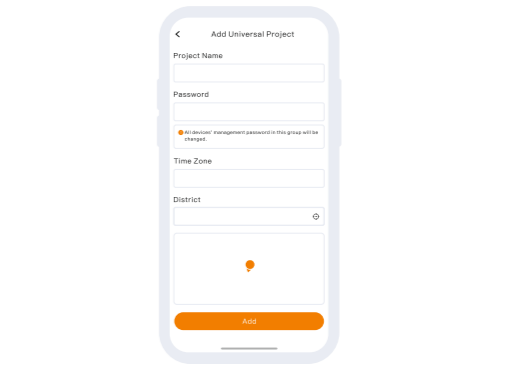


- Enter the SN number or scan the SN barcode on the body label and click "Auto Detect". Then enter the last six digits of the MAC address for security and click "Auto Detect".

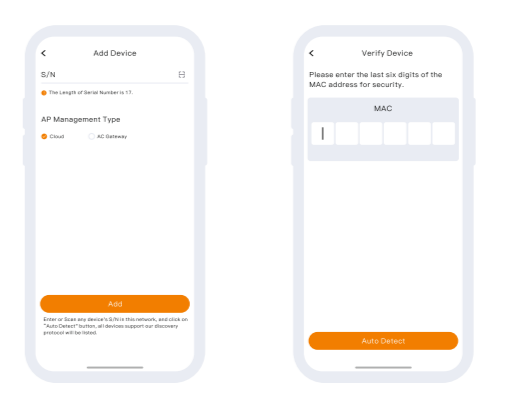


7. Cloud Management

3. When you find the device on the cloud topology, it means the device is successfully bound to the cloud.

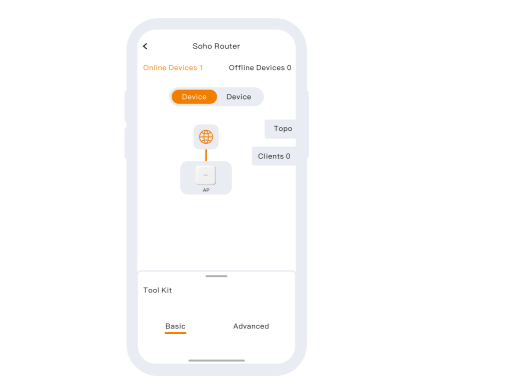

- Click "Wi-Fi Configuration", you can make the basic wireless settings on the device.

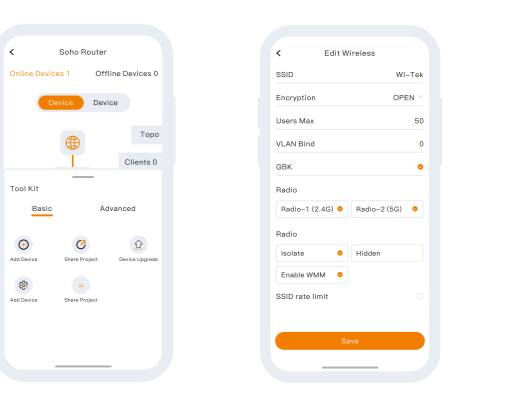

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Technical Support Company Website Cloud Management

Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

