


WI-CMS6006F-L3

### 1. Packing Content

- WI-CMS6006F-L3

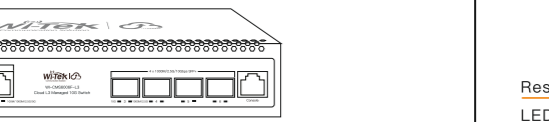

Switch x 1




Quick Installation Guide x 1



Power Adapter x 1



Serial Line x 1

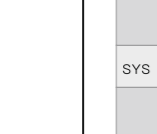


Mounting Accessories

(Magnetic Accessory x 4, Mat x 4)

### 2. Hardware Overview

For WI-CMS6006F-L3

#### • Front Panel

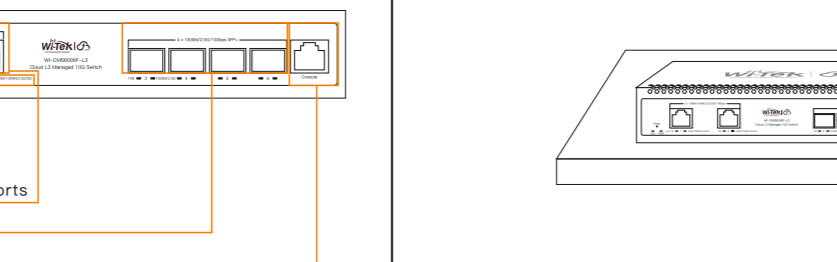

Reset


LED Indicator

2\*100M/1000M/2.5G/5G/10Gbps RJ45 Ports

4\*1000M/2.5G/10Gbps SFP+ Slots

Console

#### • Back Panel

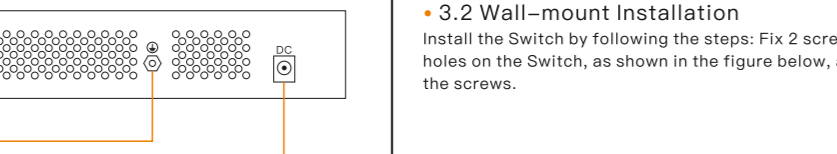

Grounding


DC IN 12V/3A

#### • LED Indicator and Button

Item	Status	Description
PWR	Green	Off: The device is power off or failed On: The device power on is normal
	Off	No device is connected to the corresponding port
Link	Blinking	Indicates that the Switch is actively sending or receiving data over that port
	Green	Indicates 10G link
	Orange	Indicates 100M/1000M/2.5G/5G link
SYS	Green	Off: The system is being started or abnormal Blinking: The system is working normally
	Off	No device is connected to the corresponding port
SFP+	Blinking	Indicates that the Switch is actively sending or receiving data over that port
	Green	Indicates 10G link
	Orange	Indicates 1000M/2.5G link
Reset	/	Hold on over 5 seconds to restore the device to the factory


### 3. Installation

#### • 3.1 Desktop Installation

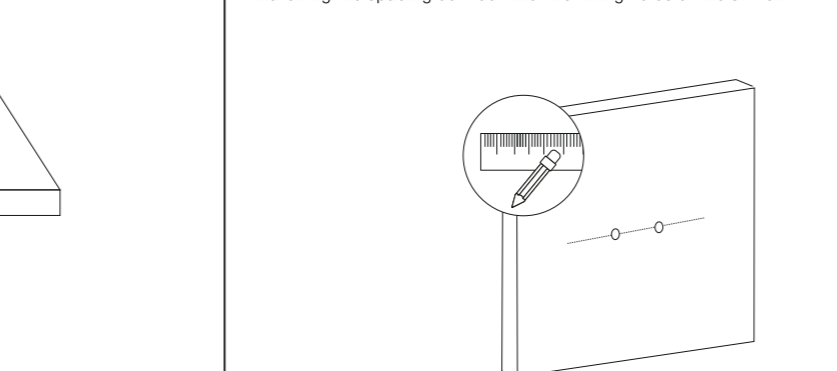


#### • 3.2 Wall-mount Installation

Install the Switch by following the steps: Fix 2 screws on the wall to align the 2 fixing holes on the Switch, as shown in the figure below, and hang the Switch smoothly on the screws.

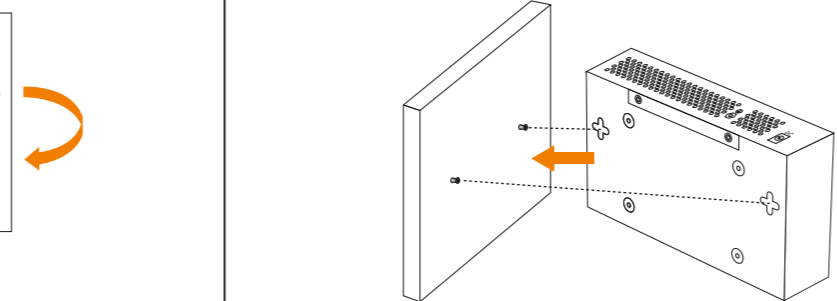


#### • 3.3 Magnetic-mount Installation

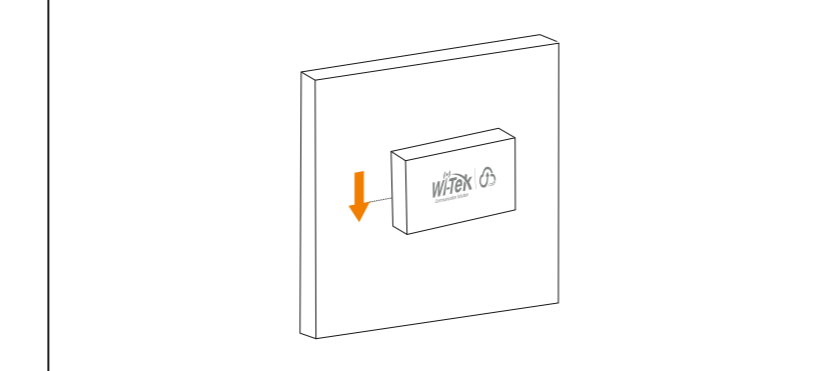

#### • 3.3 Magnetic-mount Installation


The switch can be installed in magnetic mode, and devices can be attached to iron desktops or walls.

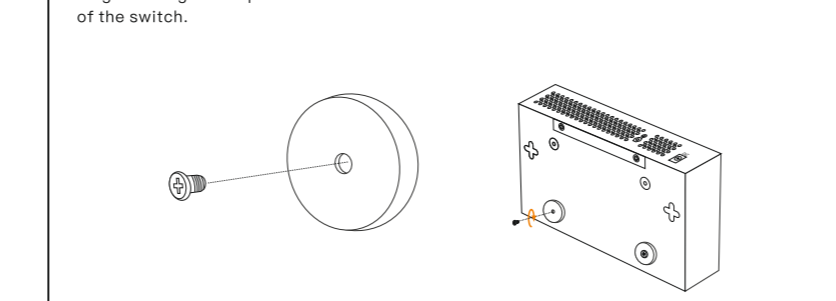

### 4. Configuration

#### • Use the console cable to access the switch

Connection Diagram:

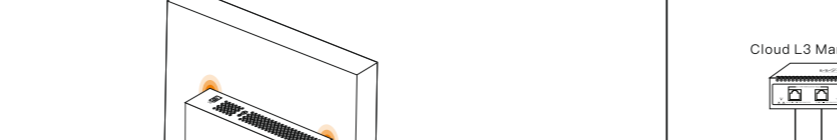

#### • Log in to the switch locally


Let the switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The switch is set to DHCP by default, so it will try to automatically obtain an IP address. If that fails, then it will use the default fallback IP address, 192.168.0.1

To log in, follow these steps:

1. Launch your web browser. Type the appropriate IP address in the address field.
2. The login screen will appear. Enter admin in the Username and Password fields. Login in




Step 1. Use a marker to mark the location of mounting holes on the wall. The two mounting holes should be in the same horizontal line. The spacing between the screws matching the spacing between the two fixing holes of the switch.

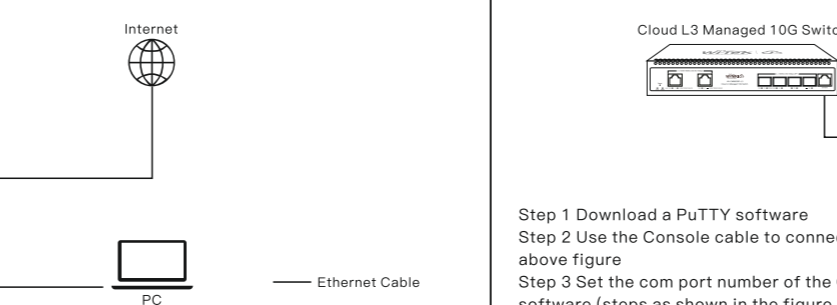

#### • 3.3 Magnetic-mount Installation

The switch can be installed in magnetic mode, and devices can be attached to iron desktops or walls.

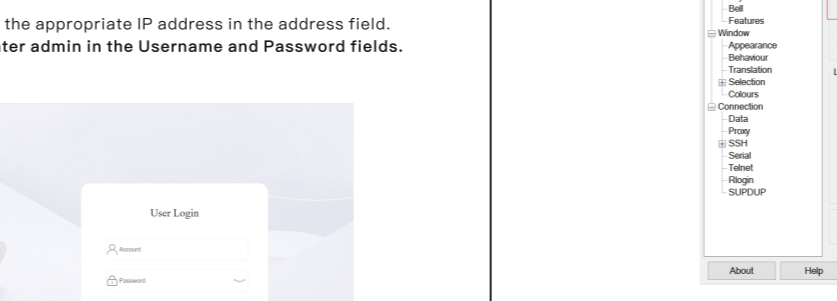

#### • Log in to the switch locally

Let the switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The switch is set to DHCP by default, so it will try to automatically obtain an IP address. If that fails, then it will use the default fallback IP address, 192.168.0.1

To log in, follow these steps:

1. Launch your web browser. Type the appropriate IP address in the address field.
2. The login screen will appear. Enter admin in the Username and Password fields. Login in


#### • Cloud login switch configuration

1. Log in to the cloud management interface

(No account, you need to register an account to log in. The URL is: <https://cloud2.wireless-tek.com>)

#### • Use the console cable to access the switch

Connection Diagram:

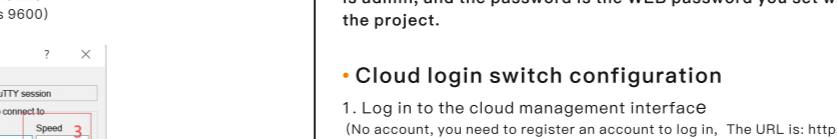

#### • Log in to the switch locally

Let the switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The switch is set to DHCP by default, so it will try to automatically obtain an IP address. If that fails, then it will use the default fallback IP address, 192.168.0.1

To log in, follow these steps:

1. Launch your web browser. Type the appropriate IP address in the address field.
2. The login screen will appear. Enter admin in the Username and Password fields. Login in

#### • Cloud login switch configuration

1. Log in to the cloud management interface

(No account, you need to register an account to log in. The URL is: <https://cloud2.wireless-tek.com>)

#### • Use the console cable to access the switch

Connection Diagram:



#### • Log in to the switch locally

Let the switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The switch is set to DHCP by default, so it will try to automatically obtain an IP address. If that fails, then it will use the default fallback IP address, 192.168.0.1

To log in, follow these steps:

1. Launch your web browser. Type the appropriate IP address in the address field.
2. The login screen will appear. Enter admin in the Username and Password fields. Login in


#### • Cloud login switch configuration

1. Log in to the cloud management interface

(No account, you need to register an account to log in. The URL is: <https://cloud2.wireless-tek.com>)

#### • Use the console cable to access the switch

Connection Diagram:

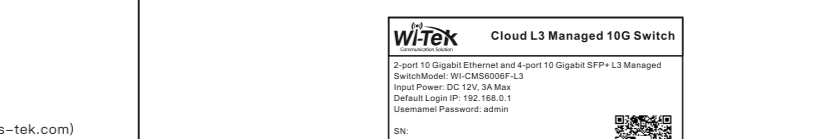

#### • Log in to the switch locally

Let the switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The switch is set to DHCP by default, so it will try to automatically obtain an IP address. If that fails, then it will use the default fallback IP address, 192.168.0.1

To log in, follow these steps:

1. Launch your web browser. Type the appropriate IP address in the address field.
2. The login screen will appear. Enter admin in the Username and Password fields. Login in

#### • Cloud login switch configuration

1. Log in to the cloud management interface

(No account, you need to register an account to log in. The URL is: <https://cloud2.wireless-tek.com>)

#### • Use the console cable to access the switch

Connection Diagram:



#### • Log in to the switch locally

Let the switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The switch is set to DHCP by default, so it will try to automatically obtain an IP address. If that fails, then it will use the default fallback IP address, 192.168.0.1

To log in, follow these steps:

1. Launch your web browser. Type the appropriate IP address in the address field.
2. The login screen will appear. Enter admin in the Username and Password fields. Login in


#### • Cloud login switch configuration

1. Log in to the cloud management interface

(No account, you need to register an account to log in. The URL is: <https://cloud2.wireless-tek.com>)

#### • Use the console cable to access the switch

Connection Diagram:

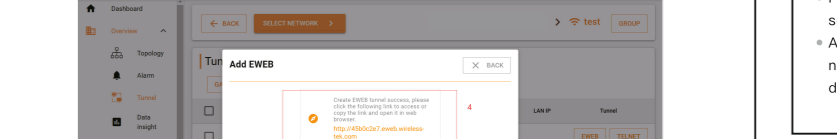

#### • Log in to the switch locally

Let the switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The switch is set to DHCP by default, so it will try to automatically obtain an IP address. If that fails, then it will use the default fallback IP address, 192.168.0.1

To log in, follow these steps:

1. Launch your web browser. Type the appropriate IP address in the address field.
2. The login screen will appear. Enter admin in the Username and Password fields. Login in

#### • Cloud login switch configuration

1. Log in to the cloud management interface

(No account, you need to register an account to log in. The URL is: <https://cloud2.wireless-tek.com>)

#### • Use the console cable to access the switch

Connection Diagram:



### Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Technical Support Company Website Cloud Management

Wireless-Tek Technology Limited  
Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.  
Website: [www.wireless-tek.com](http://www.wireless-tek.com)  
Tel: 86-0755-32811290  
Email: [sales@wireless-tek.com](mailto:sales@wireless-tek.com)  
Technical Support: [tech@wireless-tek.com](mailto:tech@wireless-tek.com)

