 




Quick Installation Guide

Wi-Fi 5/Wi-Fi 6 SD-LAN Dual-Band Wireless Router

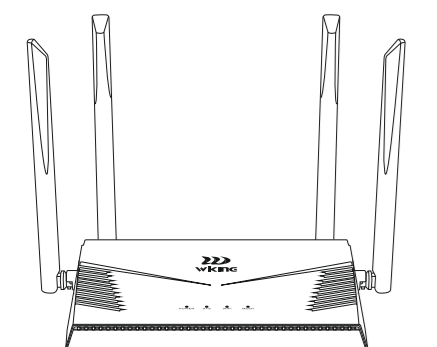


WK-R1200 | WK-R1800

www.wireless-tek.com

1.Packing Content

 
- WK-R1200 WK-R1800

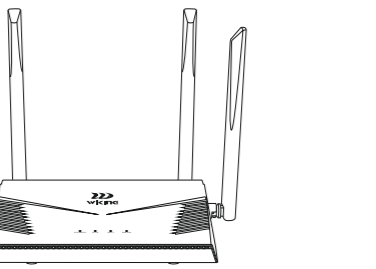


Wireless Router x 1



 12V/1A Power Adapter x 1

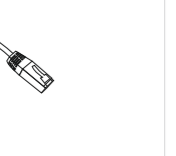


Ethernet Cable x 1

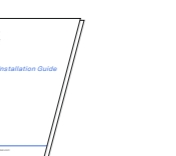 

Quick Installation Guide x 1

2.Hardware Overview

 - Back panel

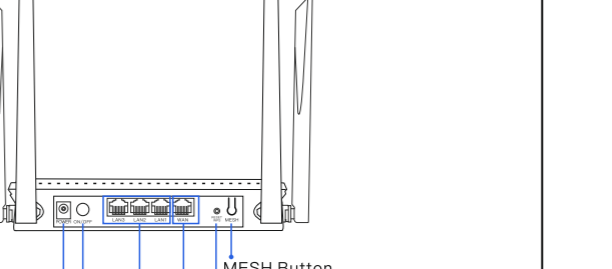

DC 12V Input Port
3*10/100Mbps RJ45 LAN Ports
1*10/100Mbps RJ45 WAN Port
MESH Button
Reset Button
On/Off Button

- Port and Button


Item	Description
LAN	10/100Mbps Ethernet RJ45 Port, which can be used to connect to the wired clients such as PC, Laptop
WAN	10/100Mbps Ethernet RJ45 Port
Reset	Press for more than 8 seconds to restore the router to factory
Mesh	Short press 1s to search for the secondary nodes when as a master node

- LED Indicator

LED Indicators	Mode	Status	Description
MESH	Master Node	Off	All Mesh links are disconnected
		Blinking	The Mesh link is being established
	On	The Mesh link has been established	
	Off	The Mesh link is not established	
Secondary Node	Blinking	The Mesh signal is poor or the Mesh link is disconnected	
	On	The Mesh link has been established	
Wi-Fi	/	Blinking	Wireless Wi-Fi enabled
	/	Off	Wireless Wi-Fi disabled
SYS	/	Blinking	The system is restoring factory
		On	Normal system operation
		Off	The indicator is faulty or the system is abnormal
PWR	/	On	The device is powered on
		Off	The device is powered off

3.Fast Mesh Pairing Setup

 - Back panel

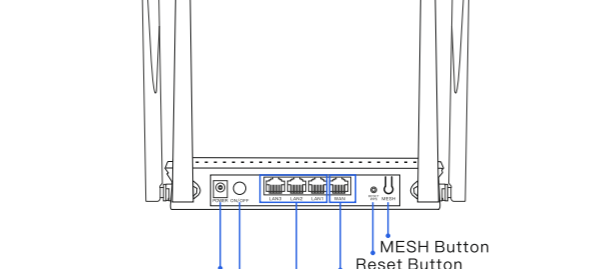

DC 12V Input Port
3*10/100Mbps RJ45 LAN Ports
1*10/100Mbps RJ45 WAN Port
MESH Button
Reset Button
On/Off Button

- Port and Button


Item	Description
LAN	10/100Mbps Ethernet RJ45 Port, which can be used to connect to the wired clients such as PC, Laptop
WAN	10/100Mbps Ethernet RJ45 Port
Reset	Press for more than 8 seconds to restore the router to factory
Mesh	Short press 1s to search for the secondary nodes when as a master node

- LED Indicator

LED Indicators	Mode	Status	Description
MESH	Master Node	Off	All Mesh links are disconnected
		Blinking	The Mesh link is being established
	On	The Mesh link has been established	
	Off	The Mesh link is not established	
Secondary Node	Blinking	The Mesh signal is poor or the Mesh link is disconnected	
	On	The Mesh link has been established	
Wi-Fi	/	Blinking	Wireless Wi-Fi enabled
	/	Off	Wireless Wi-Fi disabled
SYS	/	Blinking	The system is restoring factory
		On	Normal system operation
		Off	The indicator is faulty or the system is abnormal
PWR	/	On	The device is powered on
		Off	The device is powered off

4.Web Management

 - Back panel

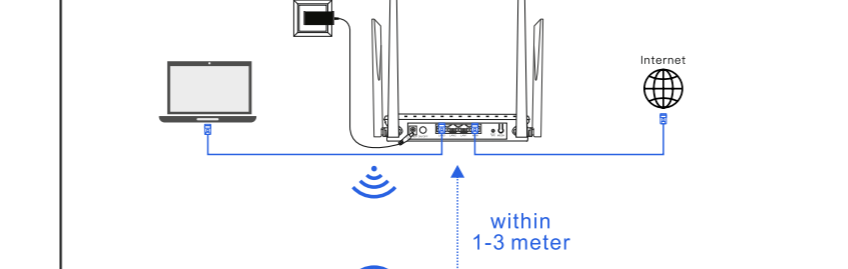

DC 12V Input Port
3*10/100Mbps RJ45 LAN Ports
1*10/100Mbps RJ45 WAN Port
MESH Button
Reset Button
On/Off Button

- Port and Button


Item	Description
LAN	10/100Mbps Ethernet RJ45 Port, which can be used to connect to the wired clients such as PC, Laptop
WAN	10/100Mbps Ethernet RJ45 Port
Reset	Press for more than 8 seconds to restore the router to factory
Mesh	Short press 1s to search for the secondary nodes when as a master node

- LED Indicator

LED Indicators	Mode	Status	Description
MESH	Master Node	Off	All Mesh links are disconnected
		Blinking	The Mesh link is being established
	On	The Mesh link has been established	
	Off	The Mesh link is not established	
Secondary Node	Blinking	The Mesh signal is poor or the Mesh link is disconnected	
	On	The Mesh link has been established	
Wi-Fi	/	Blinking	Wireless Wi-Fi enabled
	/	Off	Wireless Wi-Fi disabled
SYS	/	Blinking	The system is restoring factory
		On	Normal system operation
		Off	The indicator is faulty or the system is abnormal
PWR	/	On	The device is powered on
		Off	The device is powered off

5.Cloud Management

 - Back panel

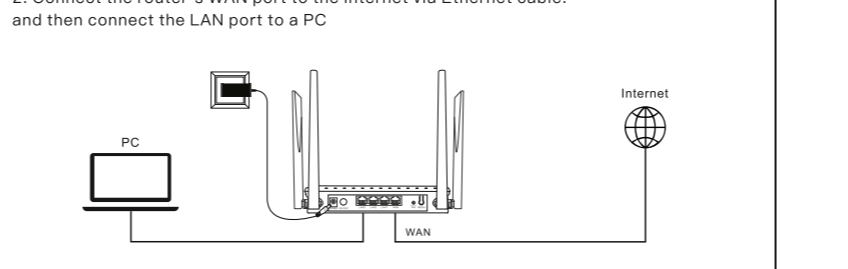

DC 12V Input Port
3*10/100Mbps RJ45 LAN Ports
1*10/100Mbps RJ45 WAN Port
MESH Button
Reset Button
On/Off Button

- Port and Button


Item	Description
LAN	10/100Mbps Ethernet RJ45 Port, which can be used to connect to the wired clients such as PC, Laptop
WAN	10/100Mbps Ethernet RJ45 Port
Reset	Press for more than 8 seconds to restore the router to factory
Mesh	Short press 1s to search for the secondary nodes when as a master node

- LED Indicator

LED Indicators	Mode	Status	Description
MESH	Master Node	Off	All Mesh links are disconnected
		Blinking	The Mesh link is being established
	On	The Mesh link has been established	
	Off	The Mesh link is not established	
Secondary Node	Blinking	The Mesh signal is poor or the Mesh link is disconnected	
	On	The Mesh link has been established	
Wi-Fi	/	Blinking	Wireless Wi-Fi enabled
	/	Off	Wireless Wi-Fi disabled
SYS	/	Blinking	The system is restoring factory
		On	Normal system operation
		Off	The indicator is faulty or the system is abnormal
PWR	/	On	The device is powered on
		Off	The device is powered off

1.Connect the power adapter to the router

 - Back panel

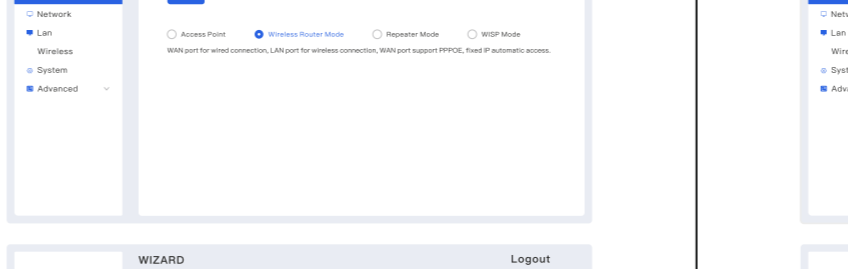

DC 12V Input Port
3*10/100Mbps RJ45 LAN Ports
1*10/100Mbps RJ45 WAN Port
MESH Button
Reset Button
On/Off Button

- Port and Button


Item	Description
LAN	10/100Mbps Ethernet RJ45 Port, which can be used to connect to the wired clients such as PC, Laptop
WAN	10/100Mbps Ethernet RJ45 Port
Reset	Press for more than 8 seconds to restore the router to factory
Mesh	Short press 1s to search for the secondary nodes when as a master node

- LED Indicator

LED Indicators	Mode	Status	Description
MESH	Master Node	Off	All Mesh links are disconnected
		Blinking	The Mesh link is being established
	On	The Mesh link has been established	
	Off	The Mesh link is not established	
Secondary Node	Blinking	The Mesh signal is poor or the Mesh link is disconnected	
	On	The Mesh link has been established	
Wi-Fi	/	Blinking	Wireless Wi-Fi enabled
	/	Off	Wireless Wi-Fi disabled
SYS	/	Blinking	The system is restoring factory
		On	Normal system operation
		Off	The indicator is faulty or the system is abnormal
PWR	/	On	The device is powered on
		Off	The device is powered off

2.Connect the router's WAN port to the Internet via Ethernet cable, and then connect the LAN port to a PC

 - Back panel

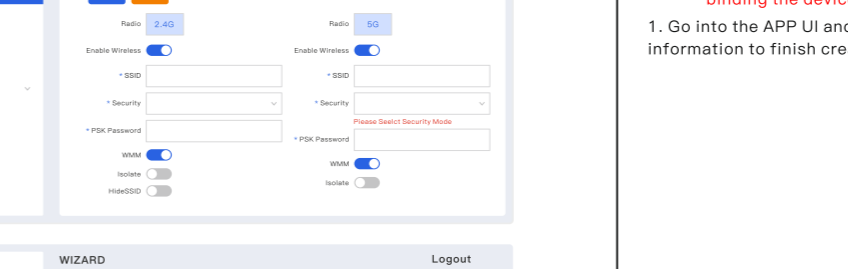

DC 12V Input Port
3*10/100Mbps RJ45 LAN Ports
1*10/100Mbps RJ45 WAN Port
MESH Button
Reset Button
On/Off Button

- Port and Button


Item	Description
LAN	10/100Mbps Ethernet RJ45 Port, which can be used to connect to the wired clients such as PC, Laptop
WAN	10/100Mbps Ethernet RJ45 Port
Reset	Press for more than 8 seconds to restore the router to factory
Mesh	Short press 1s to search for the secondary nodes when as a master node

- LED Indicator

LED Indicators	Mode	Status	Description
MESH	Master Node	Off	All Mesh links are disconnected
		Blinking	The Mesh link is being established
	On	The Mesh link has been established	
	Off	The Mesh link is not established	
Secondary Node	Blinking	The Mesh signal is poor or the Mesh link is disconnected	
	On	The Mesh link has been established	
Wi-Fi	/	Blinking	Wireless Wi-Fi enabled
	/	Off	Wireless Wi-Fi disabled
SYS	/	Blinking	The system is restoring factory
		On	Normal system operation
		Off	The indicator is faulty or the system is abnormal
PWR	/	On	The device is powered on
		Off	The device is powered off

3.Open a browser such as Chrome or Firefox and launch the login page with default IP 192.168.10.1, then type the password admin to enter the Management UI. Please follow the steps as follows to finish the quick wizard.

- Back panel

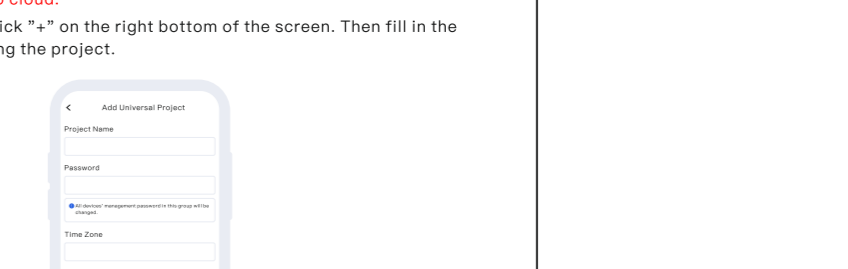

DC 12V Input Port
3*10/100Mbps RJ45 LAN Ports
1*10/100Mbps RJ45 WAN Port
MESH Button
Reset Button
On/Off Button

- Port and Button


Item	Description
LAN	10/100Mbps Ethernet RJ45 Port, which can be used to connect to the wired clients such as PC, Laptop
WAN	10/100Mbps Ethernet RJ45 Port
Reset	Press for more than 8 seconds to restore the router to factory
Mesh	Short press 1s to search for the secondary nodes when as a master node

- LED Indicator

LED Indicators	Mode	Status	Description
MESH	Master Node	Off	All Mesh links are disconnected
		Blinking	The Mesh link is being established
	On	The Mesh link has been established	
	Off	The Mesh link is not established	
Secondary Node	Blinking	The Mesh signal is poor or the Mesh link is disconnected	
	On	The Mesh link has been established	
Wi-Fi	/	Blinking	Wireless Wi-Fi enabled
	/	Off	Wireless Wi-Fi disabled
SYS	/	Blinking	The system is restoring factory
		On	Normal system operation
		Off	The indicator is faulty or the system is abnormal
PWR	/	On	The device is powered on
		Off	The device is powered off

3.When you find the device on the cloud topology, it means the device is successfully bound to the cloud.

 - Back panel

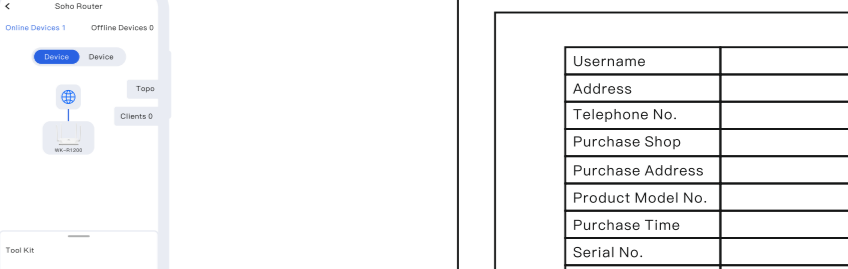

DC 12V Input Port
3*10/100Mbps RJ45 LAN Ports
1*10/100Mbps RJ45 WAN Port
MESH Button
Reset Button
On/Off Button

- Port and Button


Item	Description
LAN	10/100Mbps Ethernet RJ45 Port, which can be used to connect to the wired clients such as PC, Laptop
WAN	10/100Mbps Ethernet RJ45 Port
Reset	Press for more than 8 seconds to restore the router to factory
Mesh	Short press 1s to search for the secondary nodes when as a master node

- LED Indicator

LED Indicators	Mode	Status	Description
MESH	Master Node	Off	All Mesh links are disconnected
		Blinking	The Mesh link is being established
	On	The Mesh link has been established	
	Off	The Mesh link is not established	
Secondary Node	Blinking	The Mesh signal is poor or the Mesh link is disconnected	
	On	The Mesh link has been established	
Wi-Fi	/	Blinking	Wireless Wi-Fi enabled
	/	Off	Wireless Wi-Fi disabled
SYS	/	Blinking	The system is restoring factory
		On	Normal system operation
		Off	The indicator is faulty or the system is abnormal
PWR	/	On	The device is powered on
		Off	The device is powered off

4.Click "Wi-Fi Configuration", you can make the basic wireless settings on the router.

 - Back panel

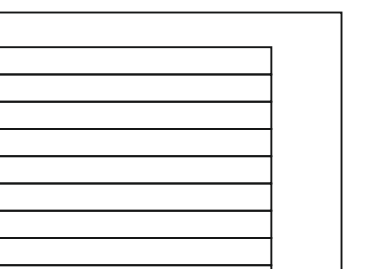

DC 12V Input Port
3*10/100Mbps RJ45 LAN Ports
1*10/100Mbps RJ45 WAN Port
MESH Button
Reset Button
On/Off Button

- Port and Button

Item	Description
LAN	10/100Mbps Ethernet RJ45 Port, which can be used to connect to the wired clients such as PC, Laptop
WAN	10/100Mbps Ethernet RJ45 Port
Reset	Press for more than 8 seconds to restore the router to factory
Mesh	Short press 1s to search for the secondary nodes when as a master node

- LED Indicator

LED Indicators	Mode	Status	Description
MESH	Master Node	Off	All Mesh links are disconnected
		Blinking	The Mesh link is being established
	On	The Mesh link has been established	
	Off	The Mesh link is not established	
Secondary Node	Blinking	The Mesh signal is poor or the Mesh link is disconnected	
	On	The Mesh link has been established	
Wi-Fi	/	Blinking	Wireless Wi-Fi enabled
	/	Off	Wireless Wi-Fi disabled
SYS	/	Blinking	The system is restoring factory
		On	Normal system operation
		Off	The indicator is faulty or the system is abnormal
PWR	/	On	The device is powered on
		Off	The device is powered off



Technical Support: tech@wireless-tek.com

Wireless-Tek Technology Limited

Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.

Website: www.wireless-tek.com

Tel: 86-0755-32811290

Email: sales@wireless-tek.com

Technical Support: tech@wireless-tek.com

© 2023 Wireless-Tek Technology Limited. All rights reserved.