



Quick Installation Guide



WI-AP216 Hardware Version: V2.0

www.wireless-tek.com

1.Packing Content


- WI-AP216



AP x 1



Plastic Anchor x 4

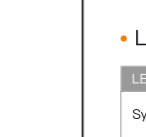

Self-Tapping Screws x 4




Ethernet Cable x 1



Quick Installation Guide x 1

2.Appearance Overview

- WI-AP216

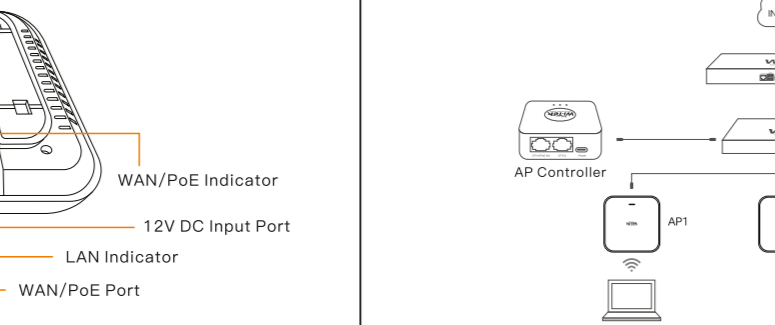

• LED indicator


LED Indicators	Status	Description
System Indicator	Green light	Fast Blinking: The system is starting. Solid On: The system is working normally.
LAN Indicator	Green	The LAN port is connected via Ethernet cable.
LAN Indicator	Off	The LAN port is disconnected.

• Port and Button


Port&Button	Description
RESET	Reset button, which is used to restore the factory. Holding down the reset button for 8 seconds to revert to factory settings.
WAN/PoE	10/100Mbps Base-T Ethernet Port, which supports 802.3af PoE input. If the AP is powered through PoE, please connect this port to the PoE switch supporting 802.3af output. It is generally connected to the upstream switch.
LAN	10/100Mbps Base-T Ethernet port It is generally connected to wired LAN devices such as PC.
DC	DC input: 12V, 1A The AP is powered through 12V DC input.

3.Typical Connection

- Bypass mode topology

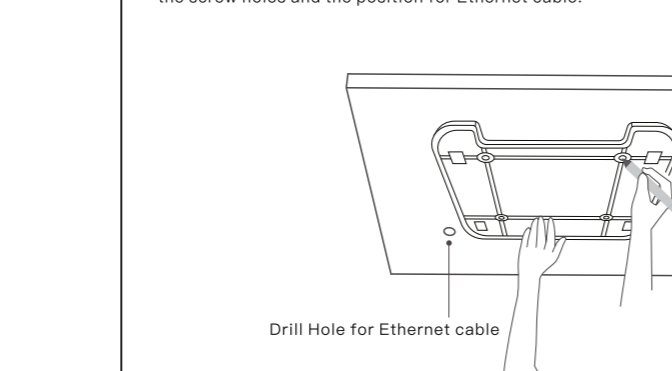





- AC Gateway mode topology

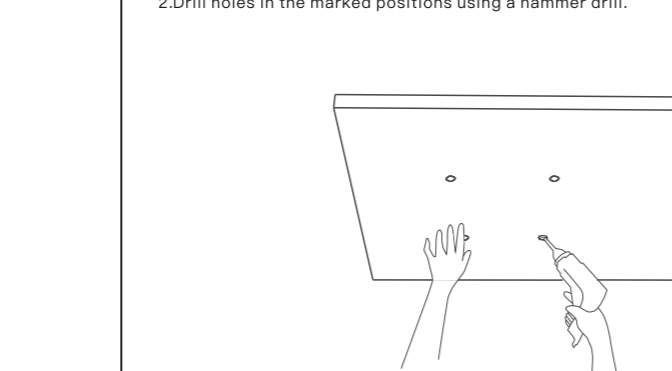

4.Device Installation

- Ceiling Mounting

 
1.Place the bracket in the center of the ceiling and then mark the positions for the screw holes and the position for Ethernet cable.

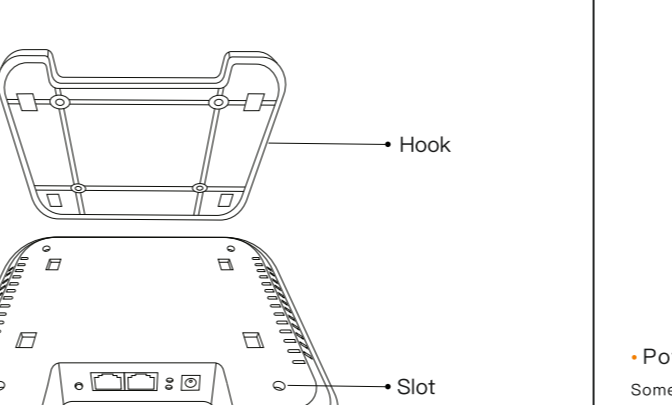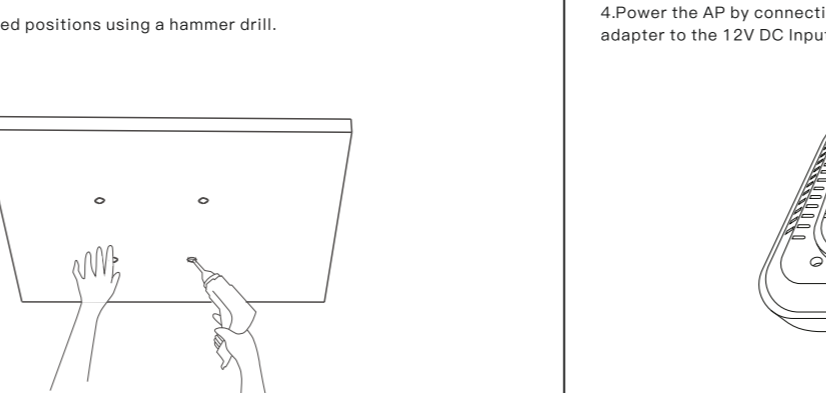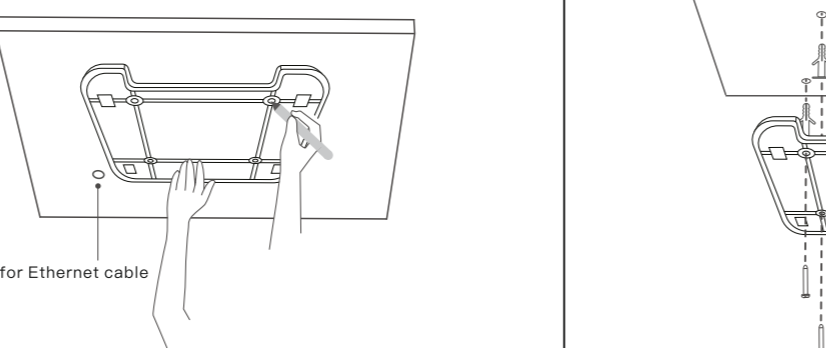

5.Power Supply


- Power via PSE Device

The APs can be powered via PoE switch which supports 802.3bt PoE output.

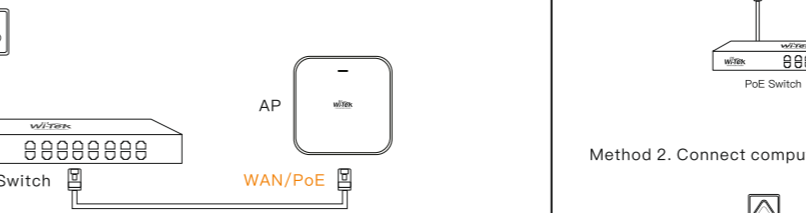

- Power via Power adapter

Some APs can be powered via power adapter which supports 12V DC output.

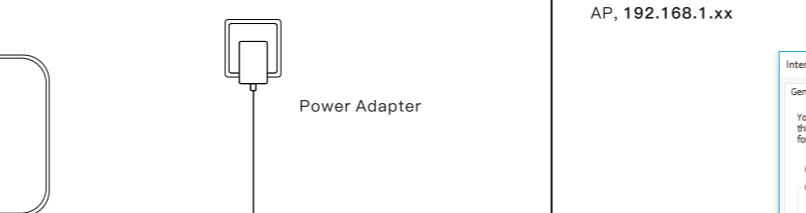


6.Configuration Method


Method 1. Connect computer to the wireless signal of AP, the default SSID is "WI-TEK xxxx".Password is 88888888



Method 2. Connect computer to the AP by Ethernet cable.

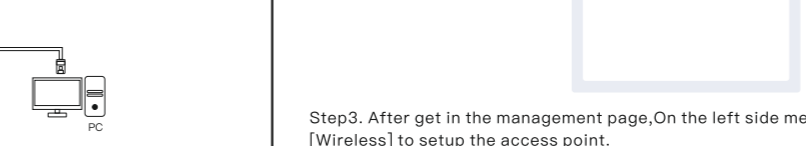


Step 1. On the computer, please set the static IP under the same subnet with AP, 192.168.1.xx

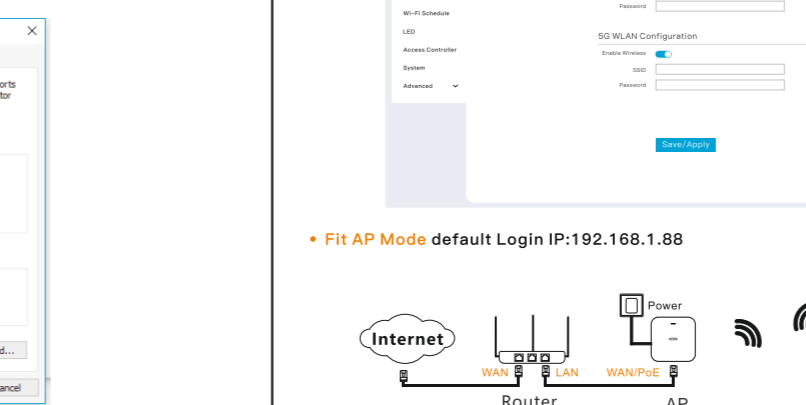


7.Cloud Management

*Note: Please ensure the device is connected to the Internet before binding the device to cloud.


1. Go into the APP UI and click "+" on the right bottom of the screen. Then fill in the information to finish creating the project.

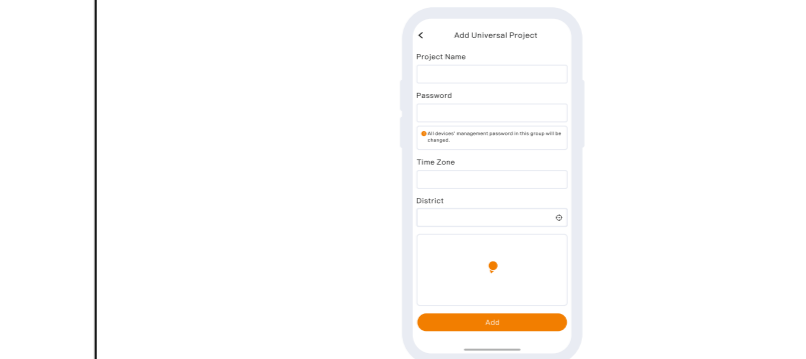

Step3. After get in the management page,On the left side menu, please go to [Wireless] to setup the access point.

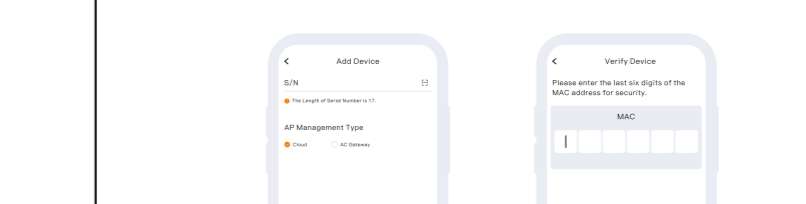

• Fit AP Mode default Login IP:192.168.1.88

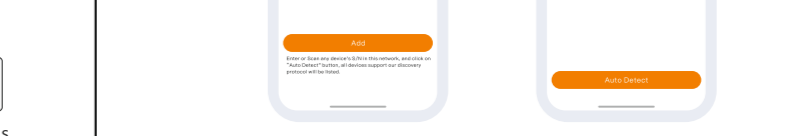


8.Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.

4. Click "Wi-Fi Configuration", you can make the basic wireless settings on the device.

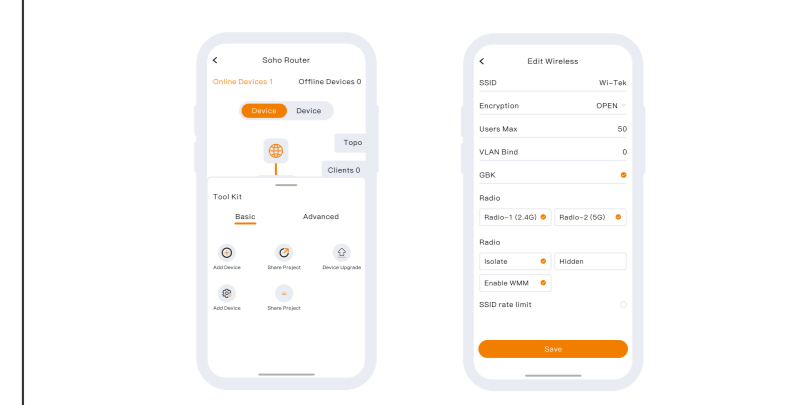

Company Website: Cloud Management: Technical Support:

Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812, Huangqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

CE FC RoHS