

Recovery openwrt firmware guide for_WK-R1200

Note: Once the OpenWRT firmware is used, the device will not be able to bind to Wi Tek Cloud.


Preparation before:



1. Set the IP address to **10.10.10.3** in the wired network interface of the PC.
2. Start the TFTP software and load the "**root_ulmage.bin**" file
(Change "openwrt-ramips-mt76x8-cw-wkr1200-squashfs-sysupgrade.bin" the file name to "root_ulmage.bin").
3. Connect the computer network cable to the any one LAN port of WK-R1200.

Start operation

1. The WK-R1200 is powered off first, long press the reset button of the WK-R1200, and then power the WK-R1200, waiting for the progress bar on the TFTP software.

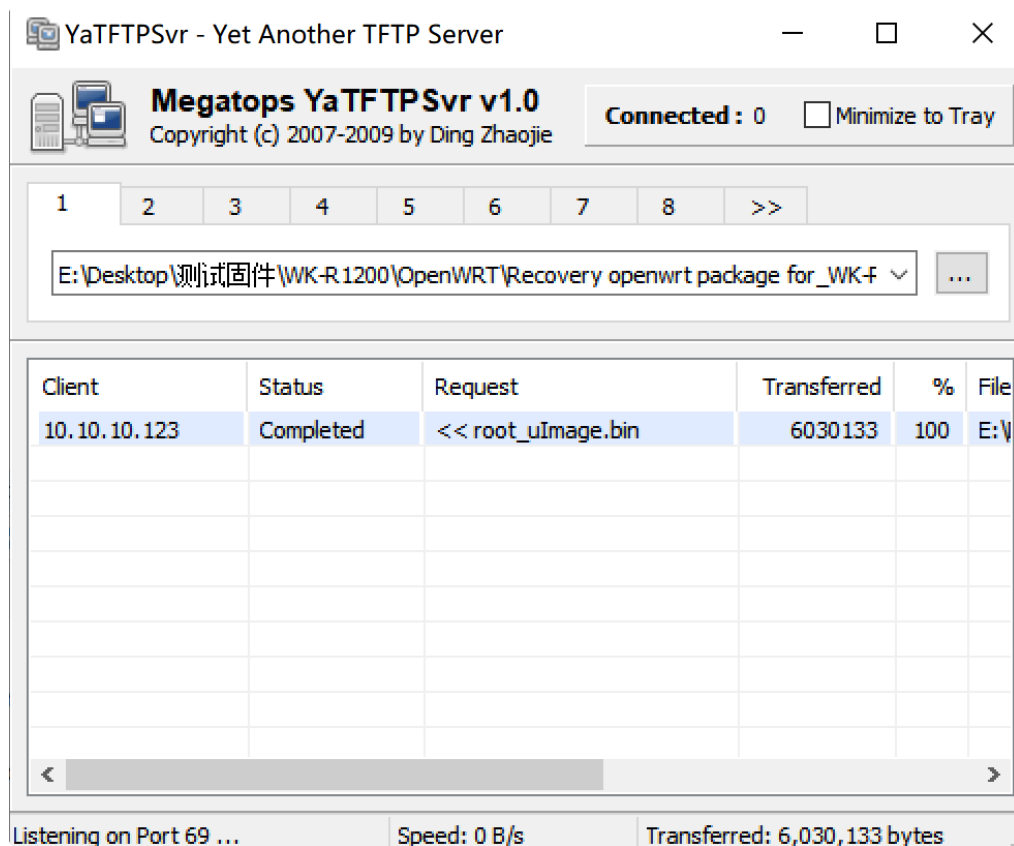

2. Until the device restarts automatically, the PC can ping 192.168.1.1
default username: **root**, passwordless

