

Recovery openwrt firmware guide for_WK-R1800

Preparation before:



Set the IP address to 192.168.1.10 in the wired network interface of the PC.

Start operation


1. The WK-R1800 is powered off first, long press the Mesh button of the WK-R1800, and then power the WK-R1200, wait for 10 seconds to release the operation.
2. Open the browser and enter the IP address: 192.168.1.1. Press Enter (window) to load the following page:



3. Click "Choose File" to choose the firmware to be upgraded

U-Boot System Recovery Mode

Upload new firmware:

 Choose File

No file chosen

Upload

名称



openwrt-ramips-mt7621-combway_wkr1800-squashfs-factory.bin

Click "Proceed" button.

U-Boot System Recovery Mode

File confirmation:

MD5: a4a80858b6890cea211415adaa59a4bc

Size: 9437184 Bytes

If all information above is correct, click [Proceed].

Proceed

Wait for 3 minutes

U-Boot System Recovery Mode

Upgrading is in progressing, please wait ...

This page may be in not responding status for a short time.

4. Until the device restarts automatically, the PC can ping 192.168.1.1
default username: **root**, passwordless

