 



Quick Installation Guide

Cloud Easy Smart PoE Switch

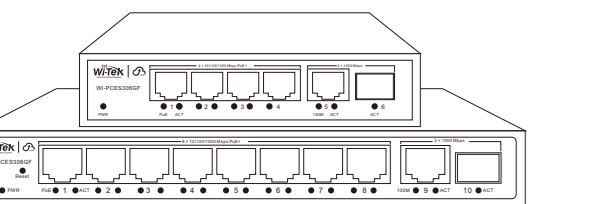

WI-PCES306GF | WI-PCES310GF

 
1. Package Contents

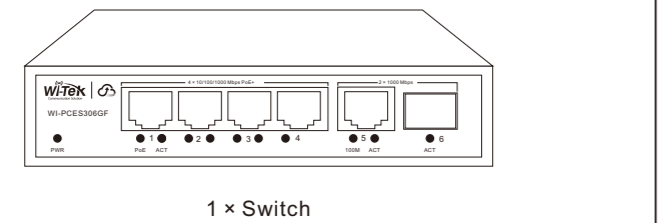


2. Hardware Introduction

2.1 Panel WI-PCES306GF

 • Front Panel

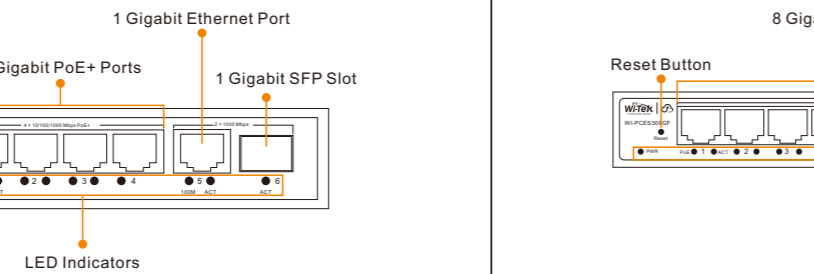


• Back Panel

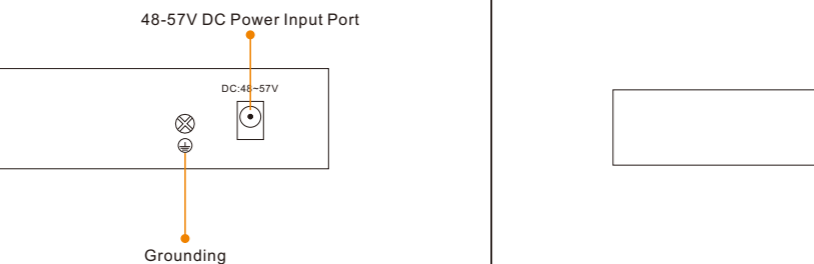 


2.1 Panel WI-PCES308GF

 • Front Panel

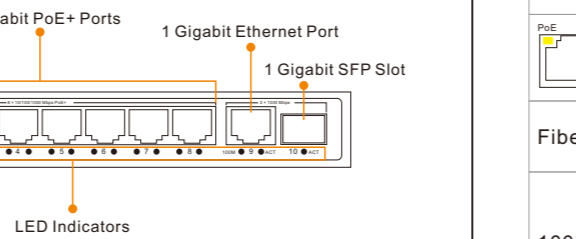

• Back Panel

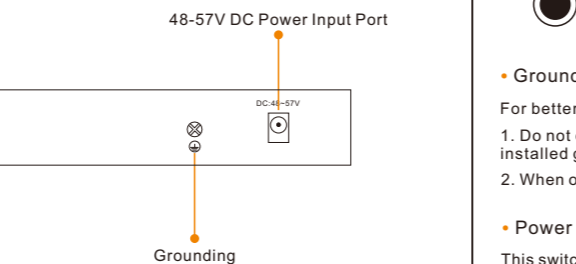 

2.2 LED Indicators

LED Indicators	Description
PWR	Power indicator Off: the device is power off or failed Green On: the device power on is normal
PoE	PoE Off: PoE not working On: PoE working ACT Off: ports link down On: ports link up Blinking: data on TX/RX
Fiber ACT	Off: ports link down On: ports link up Blinking: data on TX/RX
100M	For WI-PCES306GF Off: port 5 negotiation speed is 1000Mbps On: port 5 negotiation speed is 100Mbps For WI-PCES308GF Off: port 9 negotiation speed is 1000Mbps On: port 9 negotiation speed is 100Mbps

2.3 Button and Interface

• Reset Button

By pressing the button over 5s, the switch will be restored to the original factory default setting.

• Grounding

 
- For better protection performance, it is recommended as follows.
1. Do not damage the ground conductor or operate the device in the absence of well installed ground conductor. Conduct the appropriate electrical inspection.
 2. When operating the unit, always make the ground connection first and disconnect it at the end.

• Power Connection


- This switch can work with 48-57V DC power, the DC power connection processes are as follows.
1. Before installation, ensure that the device is disconnected from the power supply.
 2. Connect the 48-57V DC power adapter to the power input port of the switch.
 3. Turn on the DC power, and check if the power supply indicator (PWR) of the switch turns on, if the PWR indicator turns on, the power is connected correctly.

3. Installation

3.1 Desktop Installation

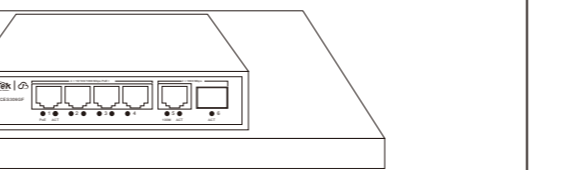


 3.2 Wall-mount Installation

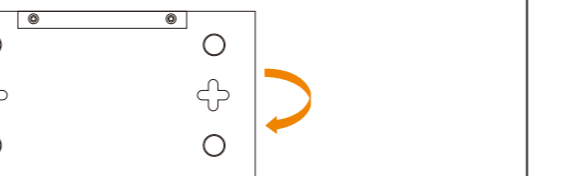

4. Configuration

 
First, the device is powered on, the internet is connected to the WAN port of the gateway, the other LAN port of the gateway is connected to the Cloud Easy Smart PoE Switch, and then the PC is connected to the switch. Make sure the PC and gateway are on the same subnet.

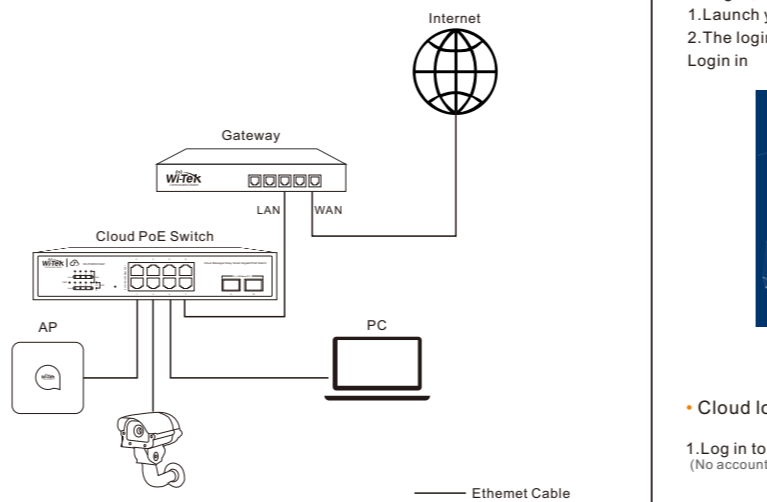

• Log in to the switch locally


Let the Switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The Switch is set to DHCP by default, so it will try to automatically obtain an IP address. If that fails, then it will use the default fallback IP address, 192.168.0.1

 - To log in, follow these steps:
1. Launch your web browser. Type the appropriate IP address in the address field.
 2. The login screen will appear. Enter admin in the Username and Password fields. Login in

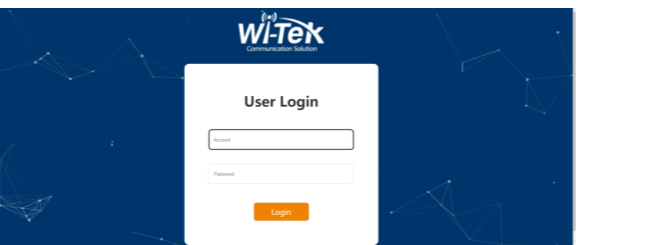


• Cloud login switch configuration

 1. Log in to the cloud management interface (No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)


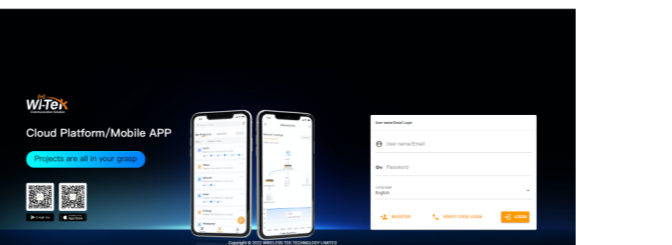


 2. Enter the cloud binding switch (explain: The switch must be connected to the Internet to bind successfully)

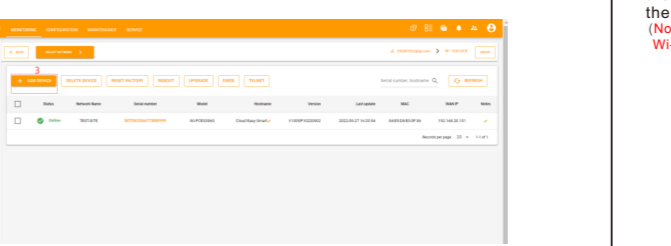




Please enter the device serial number to bind a device to the current group, device can be off when binding.

  Explanation: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below.

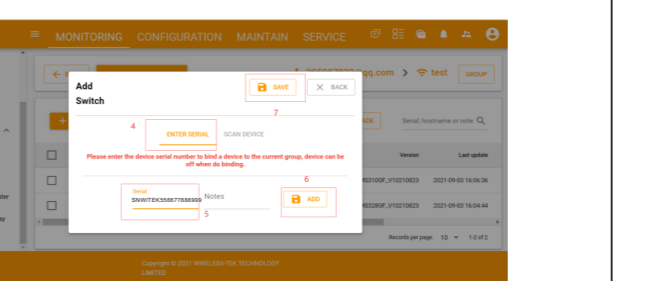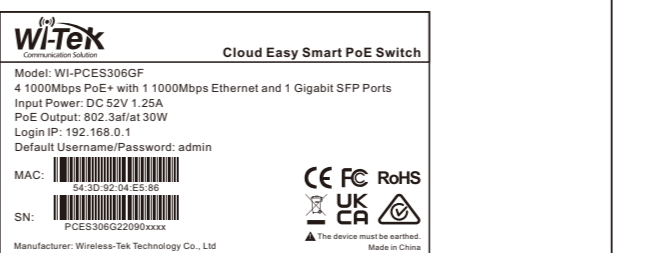

3. After binding, you can use the Switch in the Tunnel option in the cloud management, and then choose to use EWEB or TELNET to enter the switch. The default account is admin and the password is admin.

   (Note: The EWEB channel can be created only when the easy smart switch is linked with the other type of Wi-Tek cloud management device, such as cloud L2, L3 management switch, gateway, wireless AP, etc.)

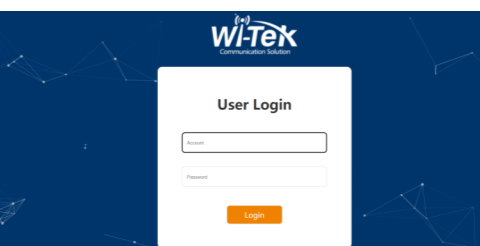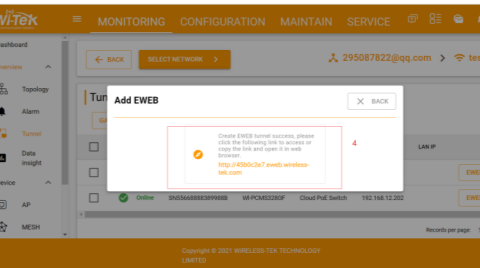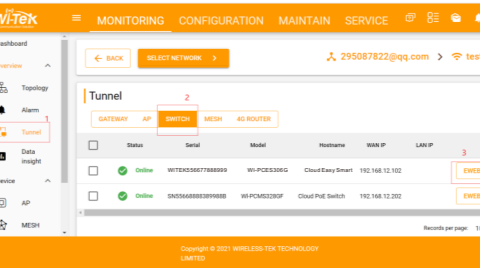

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you a new product of the same model.
- If the product defects within the three-year warranty period, we will provide the professional maintenance service. Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
 Address: Biaofan Technology Building 402, Bao'an street, Baofan District, Shenzhen City, Guangdong, China
 Website: www.wireless-tek.com
 Tel: 86-0755-32811290
 Email: sales@wireless-tek.com
 Technical Support: tech@wireless-tek.com

