




Quick Installation Guide


Cloud L3 Managed PoE Switch

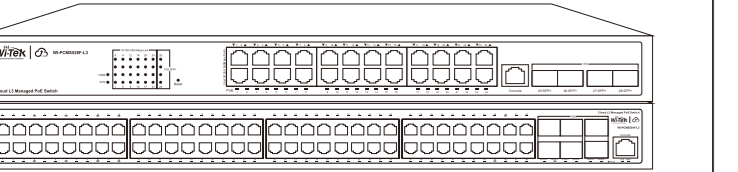

WI-PCMS528F-L3 | WI-PCMS554F-L3

www.wireless-tek.com

1. Package Contents

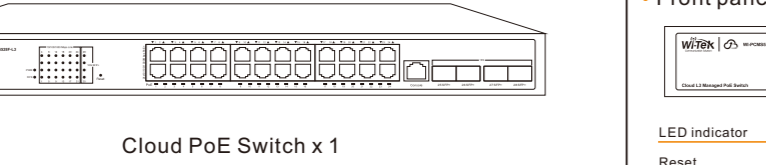

Cloud PoE Switch x 1




Quick Installation Guide x 1



Serial Line x 1



Power Cord x 1

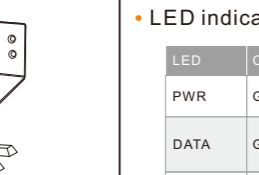


Mounting Accessories (hook x 2, mats x 4, screw x 8)


2. Appearance Overview

For WI-PCMS528F-L3

• Front panel

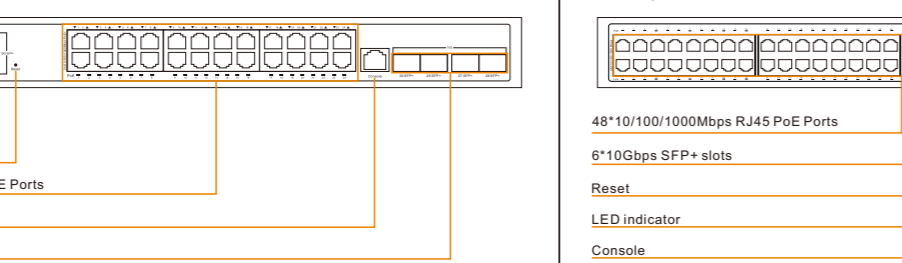

• Back panel

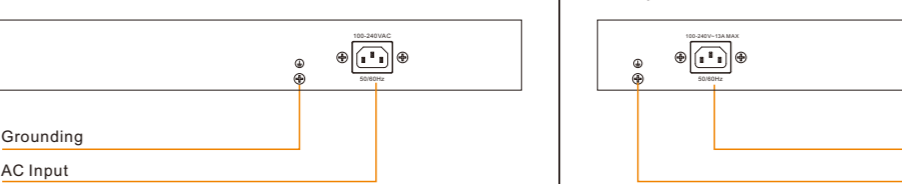


• LED indicator light


LED	Color	Function
PWR	Green	Off: No Power supply. On: Indicates the switch has power.
DATA	Green	Off: No device is connected to the corresponding port. On: Indicates the link through that port is successfully established. Blink: Indicates that the Switch is actively sending or receiving data over that port.
PoE	Orange	Off: No PoE powered device (PD) connected. On: There is a PoE PD connected to be port, which supply power successfully. Blink: Indicates the port is abnormal.
SYS	Green	Blinking: The system is working properly. Off: The system is being started or is abnormal.

For WI-PCMS554F-L3

• Front panel

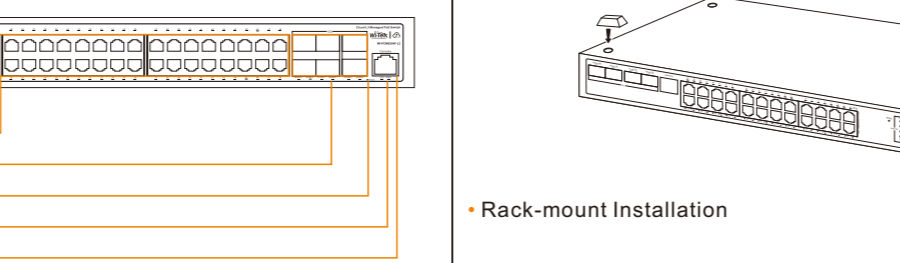

• Back panel

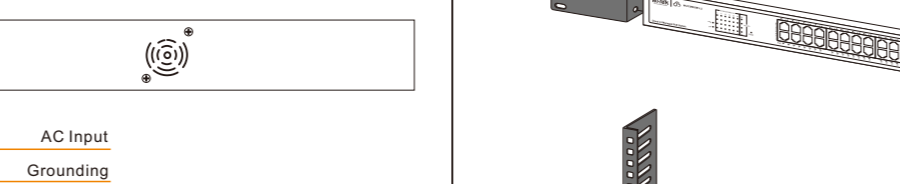


• LED indicator light


LED	Color	Function
PWR	Green	Off: No Power supply. On: Indicates the switch has power.
DATA	Green	Off: No device is connected to the corresponding port. On: Indicates the link through that port is successfully established. Blink: Indicates that the Switch is actively sending or receiving data over that port.
PoE	Orange	Off: No PoE powered device (PD) connected. On: There is a PoE PD connected to be port, which supply power successfully. Blink: Indicates the port is abnormal.
SYS	Green	Blinking: The system is working properly. Off: The system is being started or is abnormal.

3. Installation

• Desktop installation

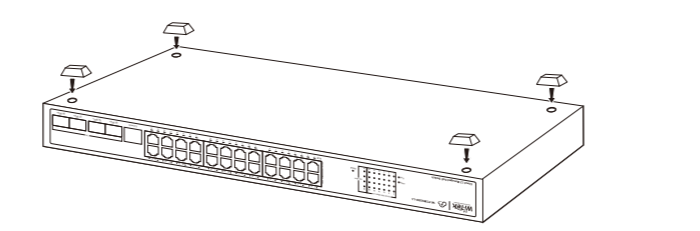


• Rack-mount Installation

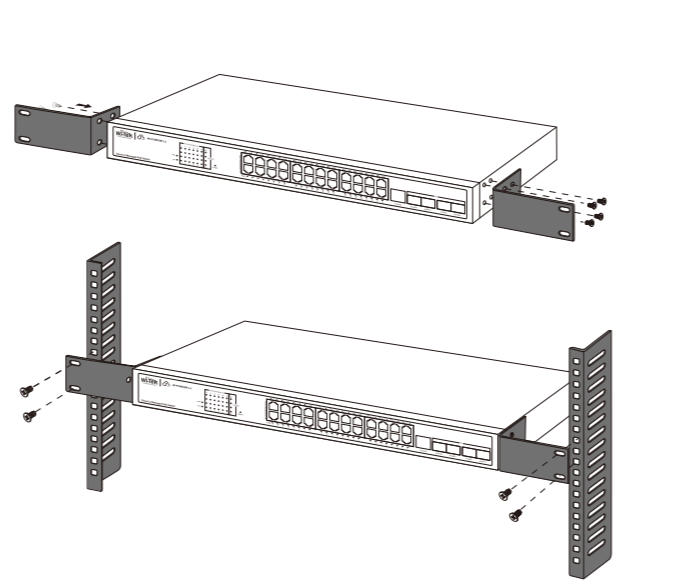

4. Configuration

• Desktop installation

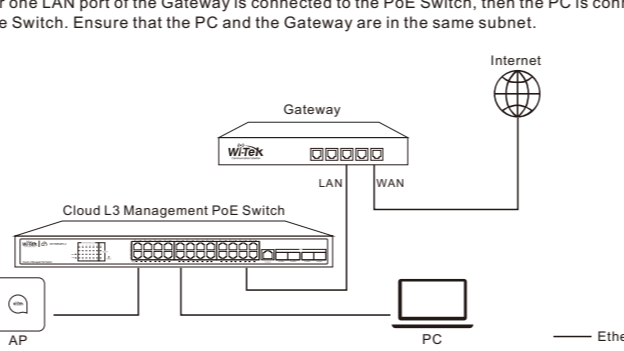

• Log in to the switch locally

 
Let the switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The switch is set to DHCP by default, so it will try to automatically obtain an IP address. If that fails, then it will use the default fallback IP address, 192.168.0.1

- To log in, follow these steps:
1. Launch your web browser. Type the appropriate IP address in the address field.
 2. The login screen will appear. Enter admin in the Username and Password fields. Login in



• Use the console cable to access the switch


Connection Diagram:



Step 1 Download a PuTTY software
Step 2 Use the Console cable to connect the computer and the switch as shown in the above figure
Step 3 Set the com port number of the Console line and the baud rate of the switch in the software (steps as shown in the figure below).


Notice:

- Step 2 is your computer recognizes the COM number of the Console line
Step 3 is the baud rate of the exchange (the baud rate of the switch is 9600)

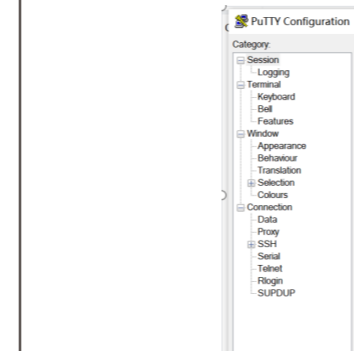

• Use Telnet to log in to the CLI mode of the switch

 
Connection Diagram:



Step 1 Configure the IP address of the computer and the IP address of the same segment as the switch
Step 2 Open the cmd window of the computer
Step 3 Enter Telnet followed by the management IP address of the switch (for example, if the management IP address of the switch is 192.168.0.1, enter Telnet 192.168.0.1)


Notice:

- If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

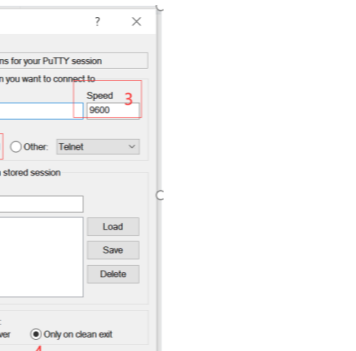



• Use Telnet to log in to the CLI mode of the switch

 Connection Diagram:




Step 1 Log in to the cloud management interface (No account, you need to register an account to log in, The URL is: http://cloud2.wireless-tek.com)

Explanation: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below

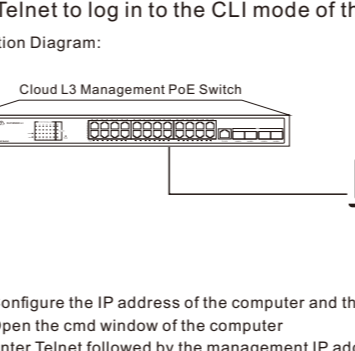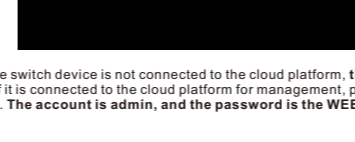



• Cloud login switch configuration

 1. Log in to the cloud management interface



2. Enter the cloud binding switch (explain: The switch must be connected to the Internet to bind successfully)

Please enter the device serial number to bind a device to the current group, device can be off when binding.

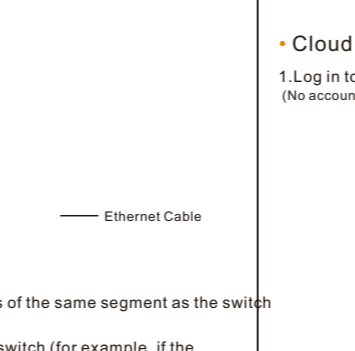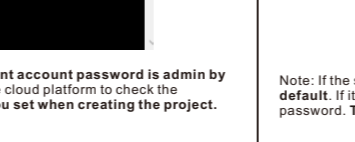



3. After binding, you can use the switch in the Tunnel option in the cloud management, and then choose to use EWEB or TELNET to enter the switch. The default account is admin and the password is admin. (After entering the switch, you can configure it based on your own needs)

2. Enter the cloud binding switch



Please enter the device serial number to bind a device to the current group, device can be off when binding.

Explanation: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below

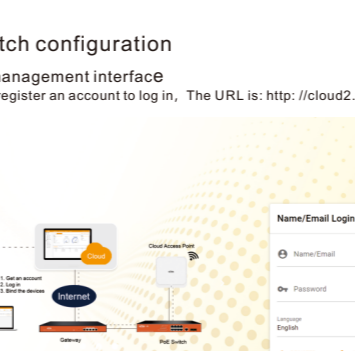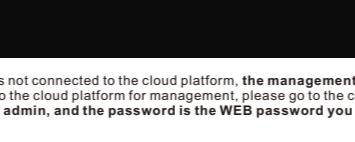


• Cloud login switch configuration

1. Log in to the cloud management interface




2. Enter the cloud binding switch (explain: The switch must be connected to the Internet to bind successfully)

Please enter the device serial number to bind a device to the current group, device can be off when binding.

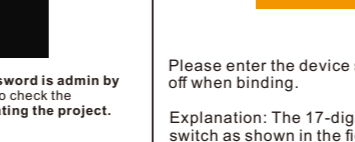


3. After binding, you can use the switch in the Tunnel option in the cloud management, and then choose to use EWEB or TELNET to enter the switch. The default account is admin and the password is admin. (After entering the switch, you can configure it based on your own needs)

 2. Enter the cloud binding switch




Please enter the device serial number to bind a device to the current group, device can be off when binding.

Explanation: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below

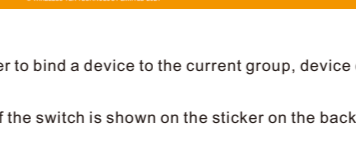


• Cloud login switch configuration

 1. Log in to the cloud management interface




2. Enter the cloud binding switch (explain: The switch must be connected to the Internet to bind successfully)

Please enter the device serial number to bind a device to the current group, device can be off when binding.

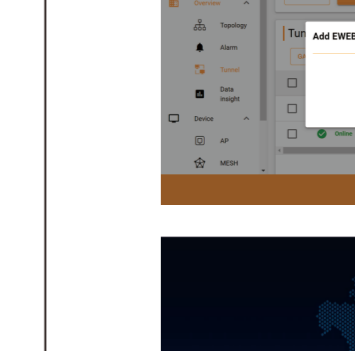



3. After binding, you can use the switch in the Tunnel option in the cloud management, and then choose to use EWEB or TELNET to enter the switch. The default account is admin and the password is admin. (After entering the switch, you can configure it based on your own needs)

 2. Enter the cloud binding switch



Please enter the device serial number to bind a device to the current group, device can be off when binding.

Explanation: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below

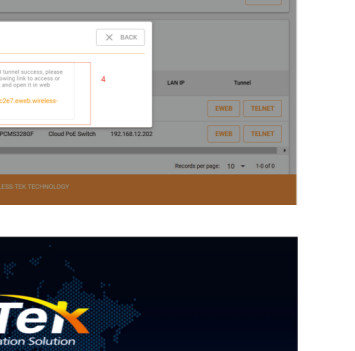
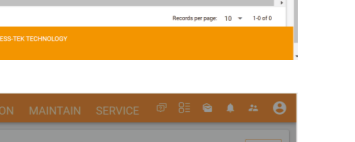


Warranty Card

• If the product defects within three months after purchase, we will provide you a new product of the same model.

If the product defects within the three-year warranty period, we will provide the professional maintenance service.
Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

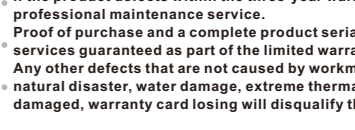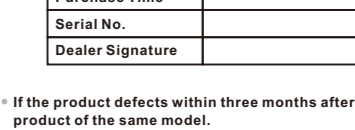

Technical Support Cloud Management

Wireless-Tek Technology Limited
Address: Biaofang Technology Building 402, Bao'an street,
Baoan District, Shenzhen City, Guangdong, China
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

