 


# Quick Installation Guide


Cloud L3 Managed Fiber Ethernet Switch



WI-CGS5328-L3

www.wireless-tek.com

## 1. Package Contents

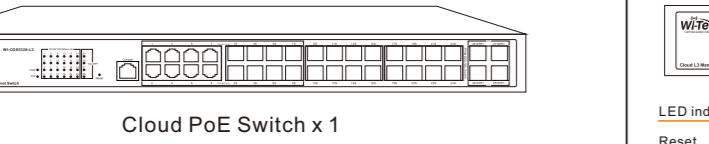


Cloud PoE Switch x 1



Quick Installation Guide x 1



Power Cord x 1

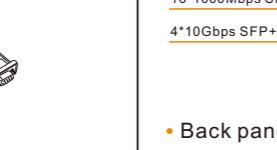

Serial Line x 1




Mounting Accessories (hook x 2; mats x 4; screw x 8)


## 2. Appearance Overview

For WI-CGS5328-L3

### • Front panel

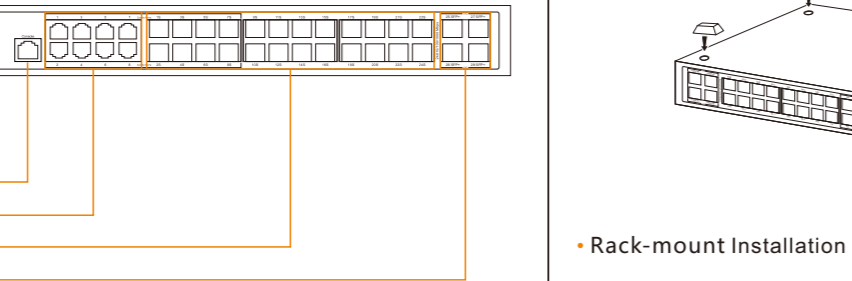

### • Back panel

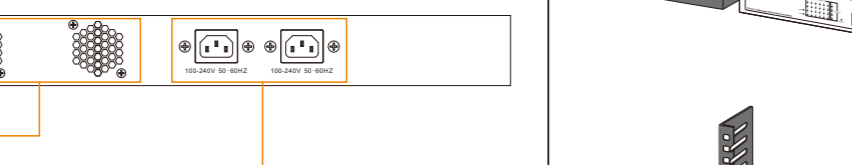


### • LED indicator light



LED	Color	Function
PWR	Green	Off: No Power supply. On: Indicates the Switch has power.
LNK/ACT	Green	Off: The network is not connected. Steady on: A 10/100/1000Mbps network device is connected. Blinking: Data is being transferred.
SYS	Green	Blinking: The system is working properly Off: The system is being started or is abnormal

## 3. Installation

### • Desktop installation

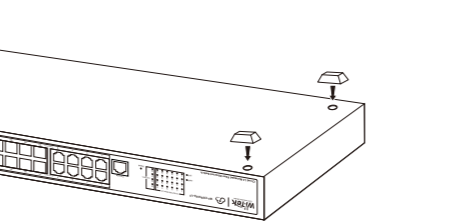


### • Rack-mount Installation

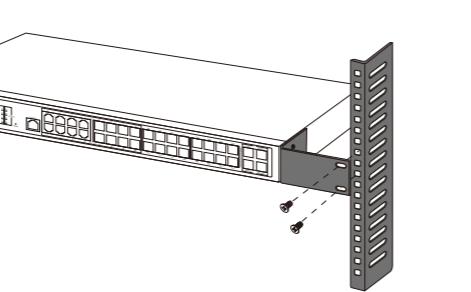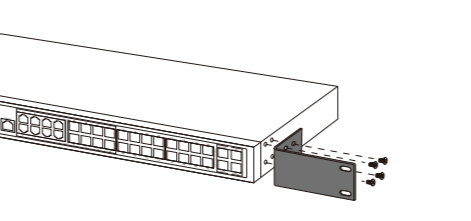

## 4. Configuration

First, the device is powered on, the Internet is connected to the WAN port of the Gateway, the other one LAN port of the Gateway is connected to the PoE Switch, then the PC is connected to the Switch. Ensure that the PC and the Gateway are in the same subnet.

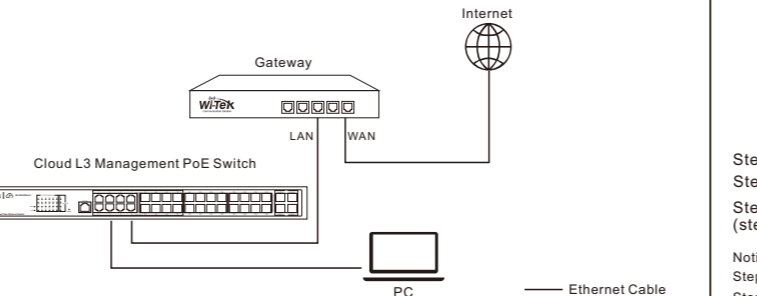

### • Log in to the switch locally

Let the switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The switch is set to DHCP by default, so it will try to automatically obtain an IP address. If that fails, then it will use the default fallback IP address, 192.168.0.1


1. Launch your web browser. Type the appropriate IP address in the address field.
2. The login screen will appear. Enter admin in the Username and Password fields. Login in



## 5. Cloud Login Configuration


### • Use the console cable to access the switch

Connection Diagram:

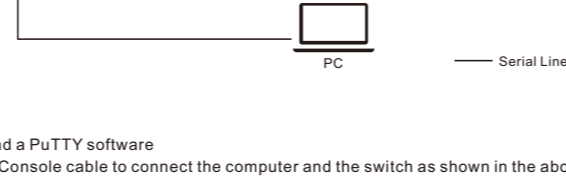

- Step 1 Download a PuTTY software
- Step 2 Use the Console cable to connect the computer and the switch as shown in the above figure
- Step 3 Set the com port number of the Console line and the baud rate of the switch in the software (steps as shown in the figure below).


Note: Step 2 is your computer recognizes the COM number of the Console line  
Step 3 is the baud rate of the exchange (the baud rate of the switch is 9600)

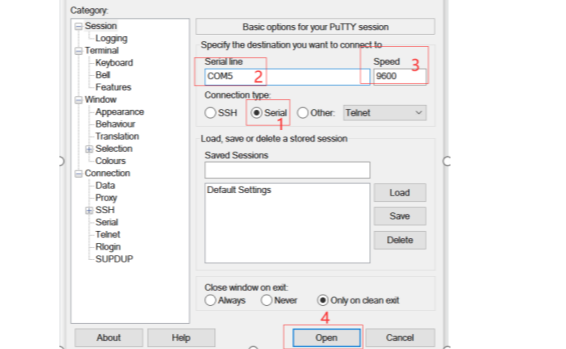


## 6. Cloud Login Configuration

### • Use Telnet to log in to the CLI mode of the switch

Connection Diagram:

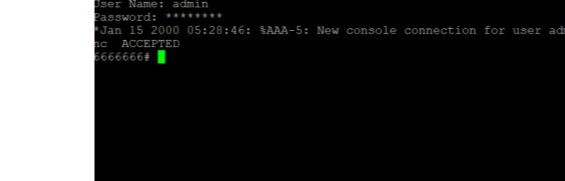



- Step 1 Configure the IP address of the computer and the IP address of the same segment as the switch
- Step 2 Open the cmd window of the computer
- Step 3 Enter Telnet followed by the management IP address of the switch (for example, if the management IP address of the switch is 192.168.0.1, enter Telnet 192.168.0.1)

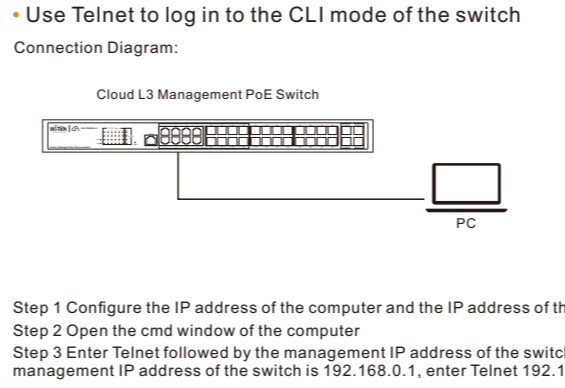

## 7. Cloud Login Configuration

### • Cloud login switch configuration



1. Log in to the cloud management interface (No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

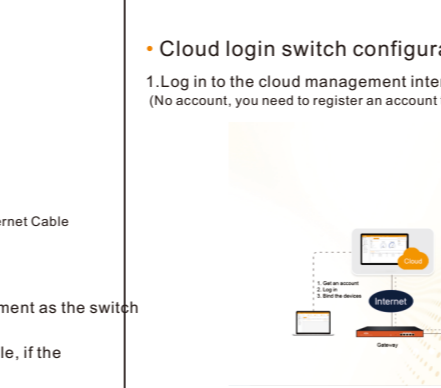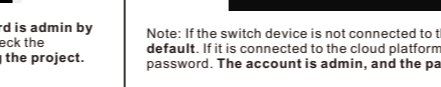

## 8. Cloud Login Configuration

### • Cloud login switch configuration



1. Log in to the cloud management interface (No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

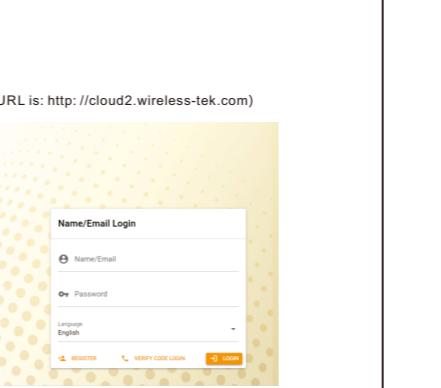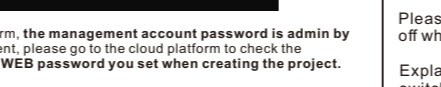

## 9. Cloud Login Configuration

### • Cloud login switch configuration


1. Log in to the cloud management interface (No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

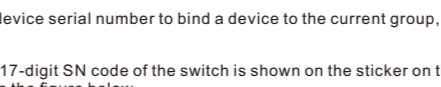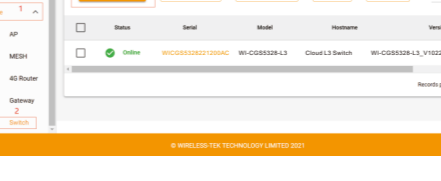

## 10. Cloud Login Configuration

### • Cloud login switch configuration



1. Log in to the cloud management interface (No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

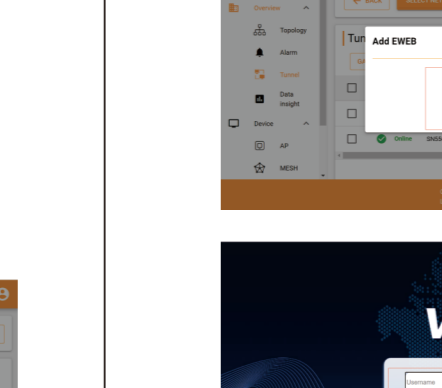

## 11. Cloud Login Configuration

### • Cloud login switch configuration


1. Log in to the cloud management interface (No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

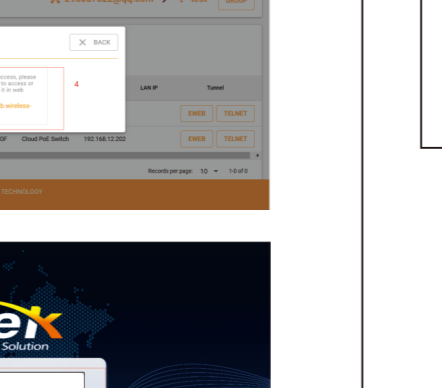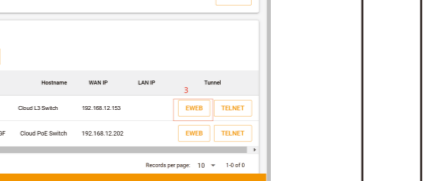

## 12. Cloud Login Configuration

### • Cloud login switch configuration


1. Log in to the cloud management interface (No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

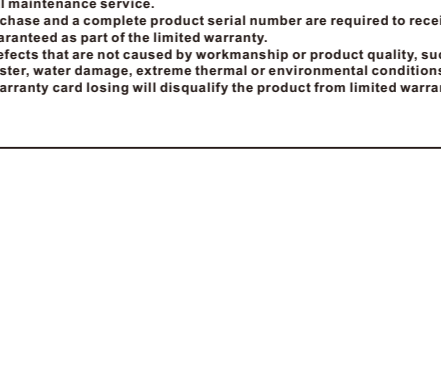

## 13. Cloud Login Configuration

### • Cloud login switch configuration


1. Log in to the cloud management interface (No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

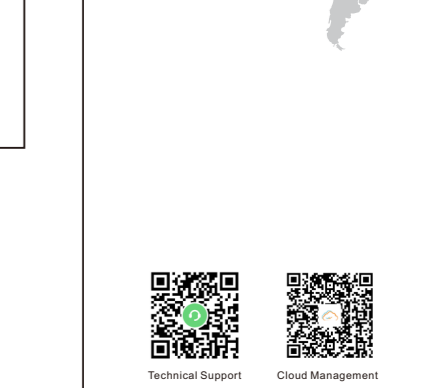

## 14. Cloud Login Configuration

### • Cloud login switch configuration

1. Log in to the cloud management interface (No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

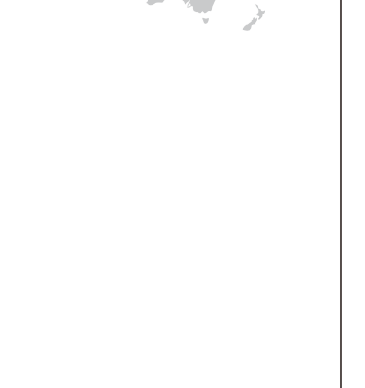

Technical Support Cloud Management

Wireless-Tek Technology Limited  
Address: Biaofang Technology Building 402, Bao'an street,  
Baoan District, Shenzhen City, Guangdong, China  
Website: [www.wireless-tek.com](http://www.wireless-tek.com)  
Tel: 86-0755-32811290  
Email: [sales@wireless-tek.com](mailto:sales@wireless-tek.com)  
Technical Support: [tech@wireless-tek.com](mailto:tech@wireless-tek.com)



Warranty Card	
Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Purchase Time	
Serial No.	
Dealer Signature	

• If the product defects within three months after purchase, we will provide you a new product of the same model.  
• If the product defects within the three-year warranty period, we will provide the professional maintenance service.  
• Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.  
• Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.