 



Quick Installation Guide

Gigabit Ethernet Switch



WI-GS5024

 
1. Package Contents




Switch x 1



 Quick Installation Guide x 1

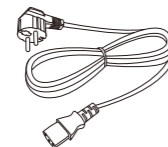


AC Power Cord x 2

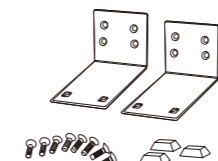 

Rack Mount Kit
(hook x 2; mats x 4; screw x 8)

2. Appearance Overview

 • Front panel



LED indicator

Reset

Console Port

8*10/100/1000Mbps RJ45 ports

18 x Gigabit SFP slots

• Back panel



Grounding


AC Power port

• LED indicator light


LED Indicator	
PWR	On: the device power on is normal Off: the device is power off or failed
SYS	Blinking: device initialization On: device on and normal operation
MS	On: The device is running on mains power Off: The device is not running on mains power
SL	On: The device is running on backup power Off: The device is not running on backup power
LNK/ACT	On: Data on TX/RX Off: Ports link down
1000M	Blinking: The negotiate speed is 1000Mbps and data on TX/RX On: The negotiate speed is 1000Mbps and ports link up Off: The negotiate speed is 10/100Mbps, not 1000Mbps
RET	On: The device is restarting Off: The device is not restarting

3. Installation

 • Desktop installation

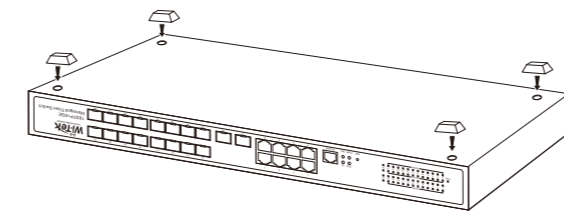

• Rack-mount Installation

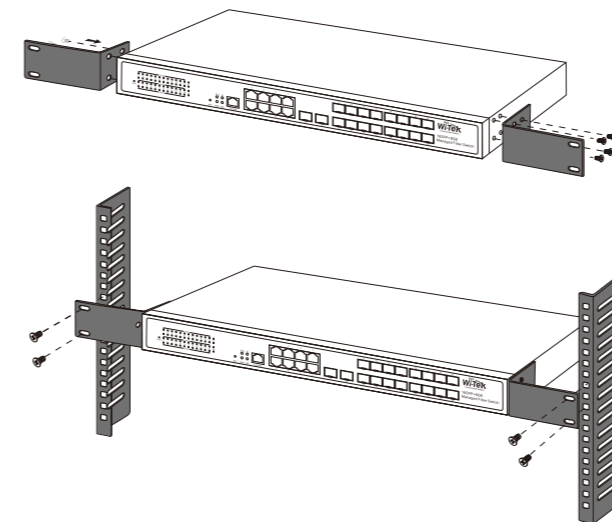 

4. Login WEB UI

For more L2 management functions, please login the Web-Based UI as the following steps:

Step 1. Find the IP address of the switch.

- The default login IP address of this series switch is 192.168.0.1, with a subnet mask of 255.255.255.0.

- If the switch receives an IP address from a DHCP server in your network. You can find this IP address on the DHCP server.

Step 2. Configure the IP address on your PC to make sure the switch and PC are in the same subnet.

- If the switch uses the static IP address of 192.168.0.1, configure your PC's IP address as 192.168.0.x ("x" ranges from 2 to 254), and subnet mask as 255.255.255.0.

- If the switch uses an IP address assigned by a DHCP server, set your PC to obtain an IP address automatically from the DHCP server.

Step 3. Launch a web browser on your PC. Enter the IP address of the switch in the address bar and fill in the username and password.

- The default login username and password are both "admin".

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you a new product of the same model.
- If the product defects within the three-year warranty period, we will provide the professional maintenance service. Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.



Technical Support



Company Website



Cloud Management

Wireless-Tek Technology Limited
 Address: Biaofan Technology Building 402, Bao'an street,
 Baoan District, Shenzhen City, Guangdong, China
 Website: www.wireless-tek.com
 Tel: 86-0755-32811290
 Email: sales@wireless-tek.com
 Technical Support: tech@wireless-tek.com