




WI-CPE800-KIT


Gigabit Outdoor Wireless Transmitter For CCTV Quick Install Guide

www.wireless-tek.com


Package content

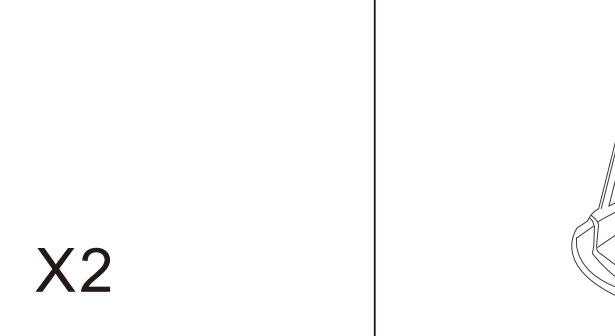


X2

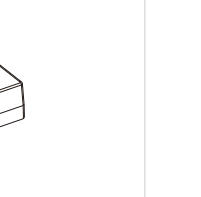


X2

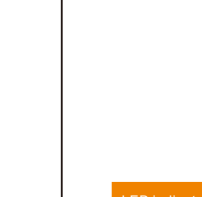


X2

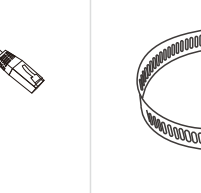


X2

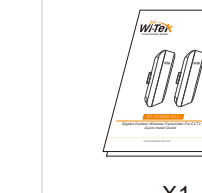

X2

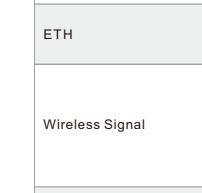


X2

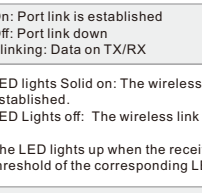

X1

Hardware Overview

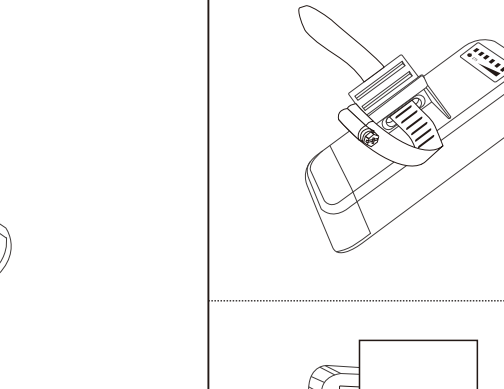


Reset
DC 12V
ETH/PoE INPUT




LED indicator	
Power	On: The device power on is normal Off: The device is power off or failed
ETH	On: Port link is established Off: Port link down Blinking: Data on TX/RX
Wireless Signal	LED lights Solid on: The wireless link has been established has been established LED Lights off: The wireless link not established. The LED lights up when the received signal strength reaches the threshold of the corresponding LED.
Reset	Press and hold for 8 seconds until the SYS indicator flashes, then release and wait for startup.


Mounting

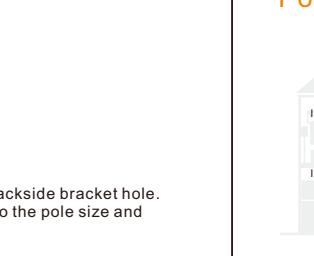

1 Insert ribbon at the backside bracket hole. Adjust it according to the pole size and installation position

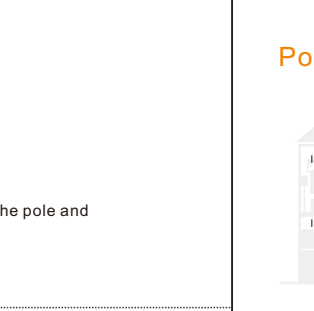


2 Install the device on the pole and tighten the ribbon.

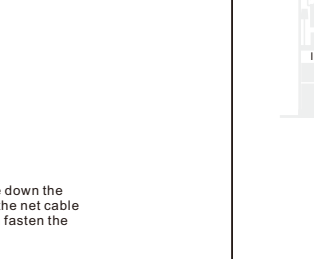

3 Hold on the buckle to take down the device back cover. Insert the net cable into the network port, then fasten the back cover.


Typical Network

Point-to-Point Application

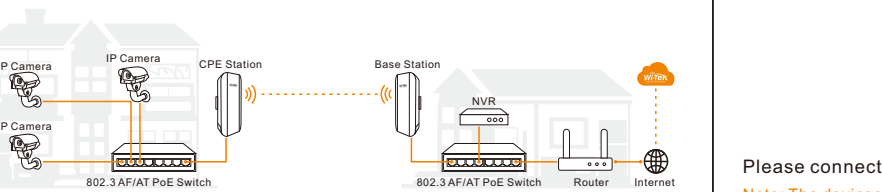


OR

Point-to-Multipoint Application

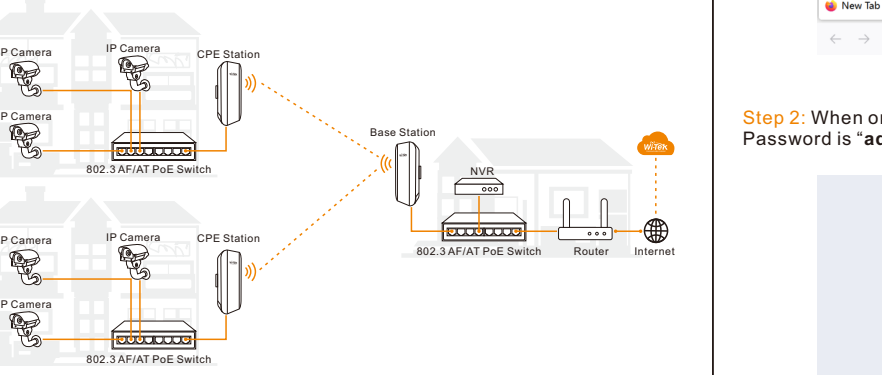


Configuring the Device

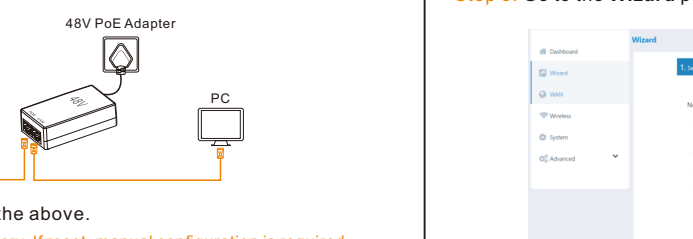


Please connect devices according to the above.
Note: The devices are pre-paired at the factory. If reset, manual configuration is required. If the device is restored, it will broadcast the SSID in the format of "Wireless_xxxx".

As a Base Station Mode

 Step 1: Launch the Web browser and enter the default IP address <http://192.168.1.88>.




Step 2: When on the login page, please enter the Password. The default Password is "admin". Then click the Login button to continue.

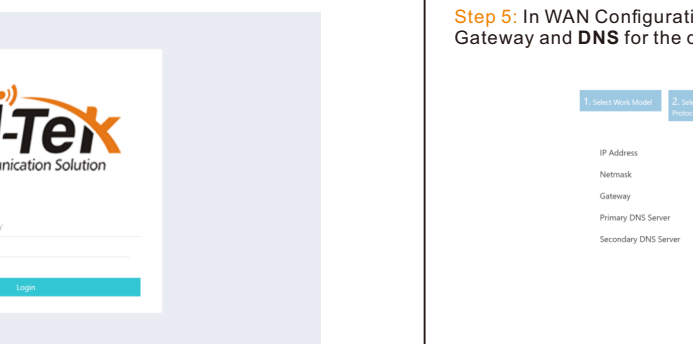


Configuring the Device


Step 3: Go to the Wizard page, select Base Station Mode, and click Next.

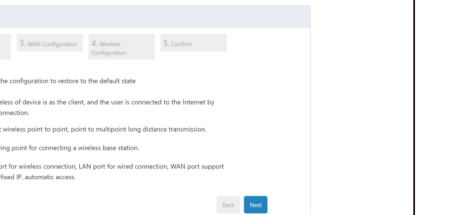


Step 4: In the Network Protocol section, Select Static IP, and click Next.

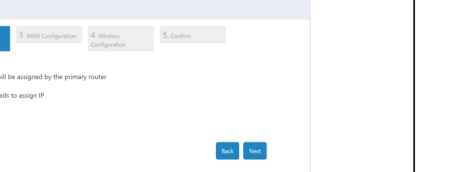

Step 5: In WAN Configuration section, Specify the IP address, Netmask, Gateway and DNS for the device. Then click Next.

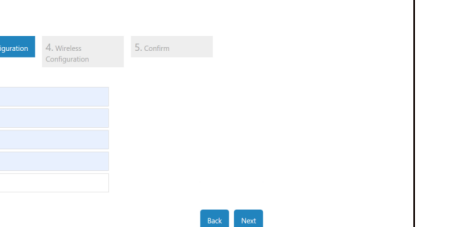

Step 6: In Wireless Configuration section, Specify the SSID, Encryption and Password for the device. Then click Next.

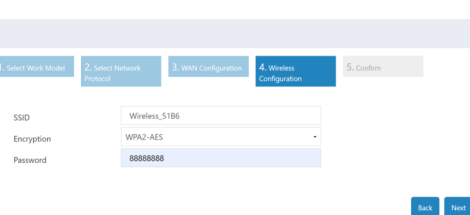


Step 7: In the confirm section, review the configurations and click Confirm to complete the wizard.




Step 8: Repeat steps 1 and 3 to the Wizard page, select CPE Mode, and click Next.




Step 9: In WAN Configuration section, Specify the IP address, Netmask, Gateway and DNS for the device. Then click Next.

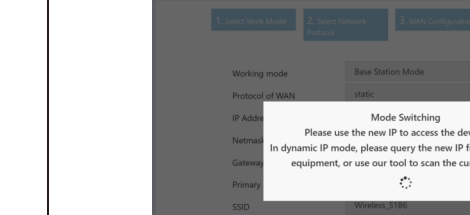


Step 10: In Wireless Configuration section, Click Start scan 5G button to search for the upstream wireless network.

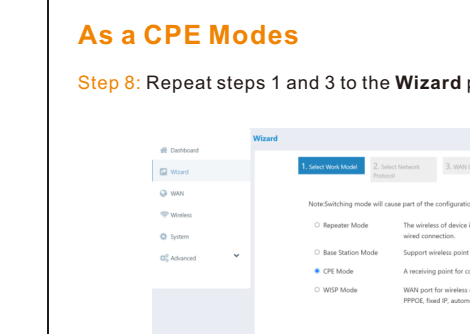

 Select the correct wireless network and auto connect.




Step 11: In the confirm section, review the configurations and click Confirm to complete the wizard.

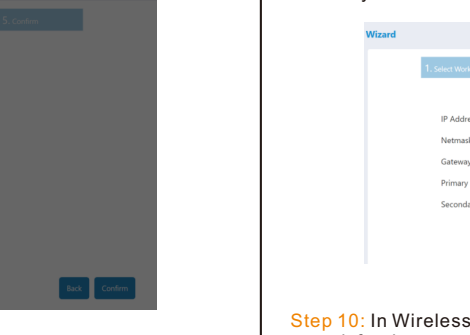


As a CPE Modes


Step 8: Repeat steps 1 and 3 to the Wizard page, select CPE Mode, and click Next.

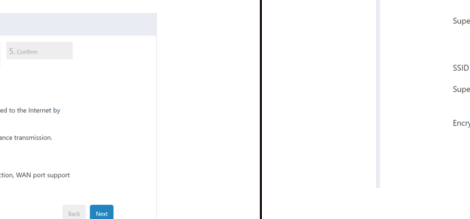


Step 9: In WAN Configuration section, Specify the IP address, Netmask, Gateway and DNS for the device. Then click Next.

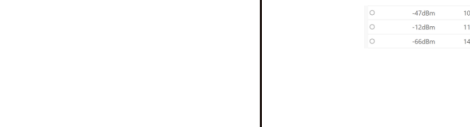

Step 10: In Wireless Configuration section, Click Start scan 5G button to search for the upstream wireless network.

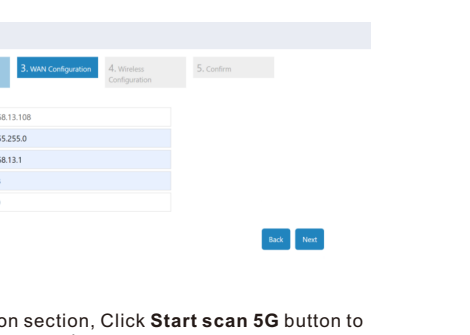


Step 11: In the confirm section, review the configurations and click Confirm to complete the wizard.

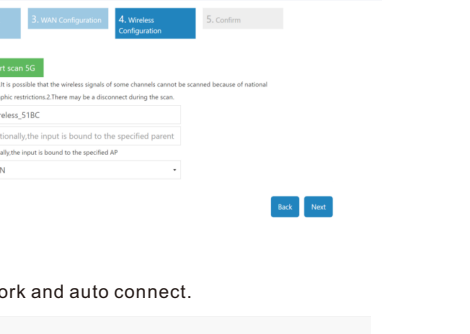

Specify the correct wireless parameters to connect to the specified wireless network. Click Next.



Step 12: In the confirm section, review the configurations and click Confirm to complete the wizard.

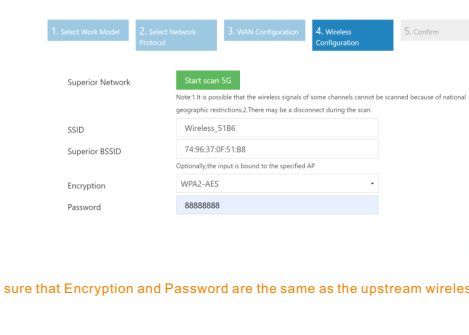

Step 13: In the confirm section, review the configurations and click Confirm to complete the wizard.



When LED indicators of both devices are on, the connection is available.



Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you a new product of the same model.
- If the product defects within the three-year warranty period, we will provide the professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.



When LED indicators of both devices are on, the connection is available.

Technical Support Company Website Cloud Management

QR codes for Technical Support, Company Website, and Cloud Management

Wireless-Tek Technology Limited
Address: Bifocan Technology Building 402, Bao'an street, Baoan District, Shenzhen City, Guangdong, China
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

Technical Support: tech@wireless-tek.com

