






# Quick Installation Guide

Superic Industrial L3 Managed Switch

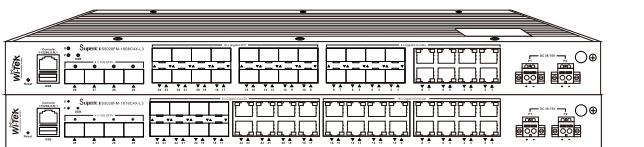

S5028FM-16T8C4X-L3 | S5028FM-16S8C4X-L3


## 1. Packing Content

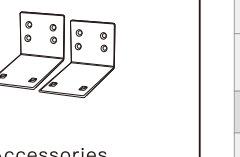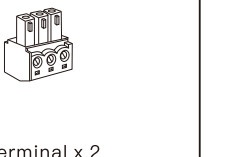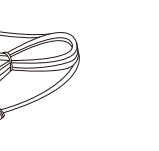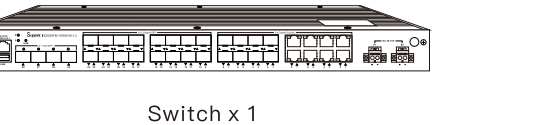


## 2. Appearance Overview

### For S5028FM-16T8C4X-L3

#### • Front Panel

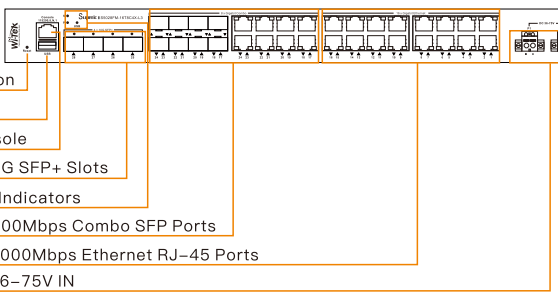

#### • Back Panel

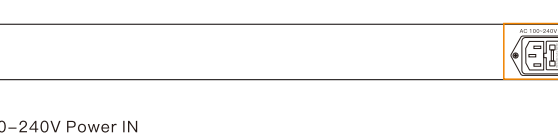


#### • LED indicator and button


LED Indicator&Button	Description
P	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
S	Blinking: device initialization On: device on normal operation
USB	On: USB flash drive is detected by device Blinking: the device is reading and writing the data from USB flash drive Off: USB flash drive not insert or not detected by device
Copper ports indicators	Green on: Port connected Blinking: data on TX/RX Off: Port disconnected
Copper speed indicators	Yellow on: The port is connected with 1000Mbps speed Off: The port is connected with 10/100Mbps speed
Fiber Indicators	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset	Hold for >5 sec. to restore factory default

### For S5028FM-16S8C4X-L3

#### • Front Panel

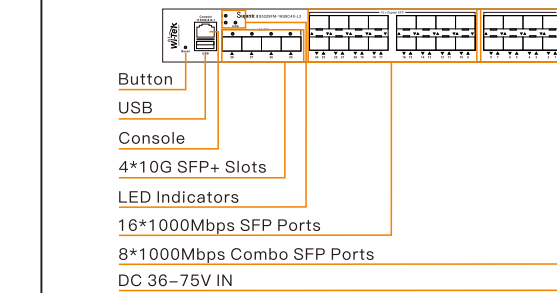

#### • Back Panel

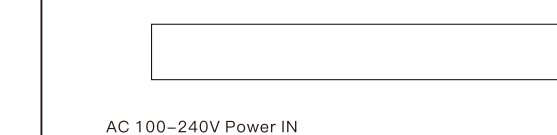


#### • LED indicator and button


LED Indicator&Button	Description
P	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
S	Blinking: device initialization On: device on normal operation
USB	On: USB flash drive is detected by device Blinking: the device is reading and writing the data from USB flash drive Off: USB flash drive not insert or not detected by device
Copper ports indicators	Green on: Port connected Blinking: data on TX/RX Off: Port disconnected
Copper speed indicators	Yellow on: The port is connected with 1000Mbps speed Off: The port is connected with 10/100Mbps speed
Fiber Indicators	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset	Hold for >5 sec. to restore factory default

## 3. Installation

### • Desktop Installation

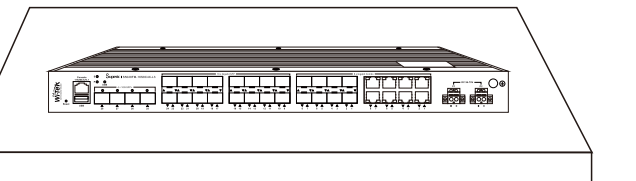


### • Rack-Mount Installation

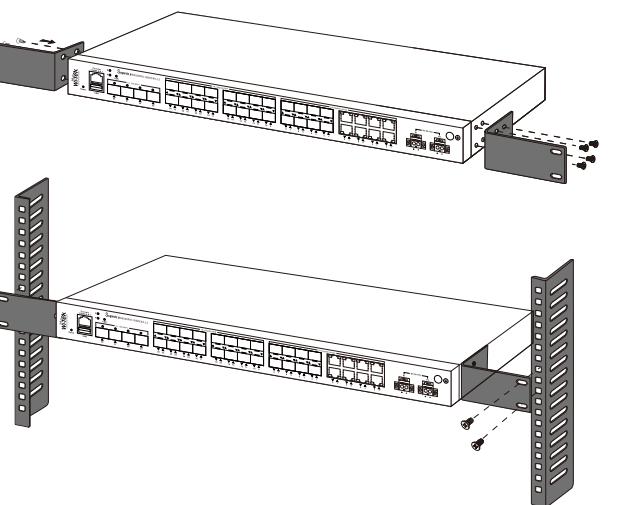


### • Log in to the switch locally

To log in, follow these steps:  
1. Launch your web browser, you type the default IP 192.168.0.1 in the address bar  
2. The login screen will appear. The default username and password are both admin

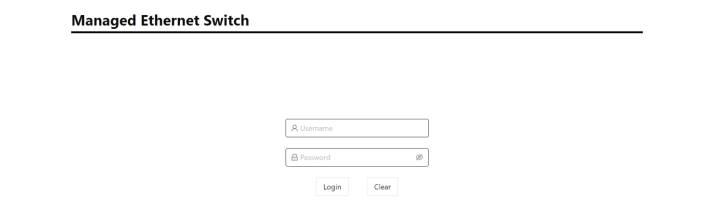


### • Use the console cable to access the switch

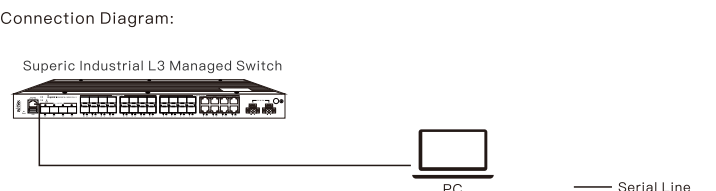


### • Desktop Installation

Step 1 Download a PuTTY software  
Step 2 Use the Console cable to connect the computer and the switch as shown in the above figure


Step 3 Set the com port number of the Console line and the baud rate of the switch in the software (steps as shown in the figure below).

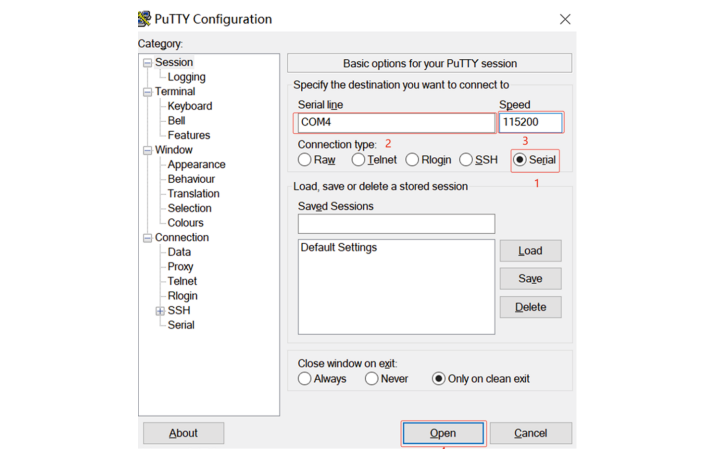

### • Use Telnet to log in to the CLI mode of the switch

 

Step 1 Configure the IP address of the computer and the IP address of the same segment as the switch  
Step 2 Open the cmd window of the computer  
Step 3 Enter Telnet followed by the management IP address of the switch (for example, if the management IP address of the switch is 192.168.0.1, enter Telnet 192.168.0.1)

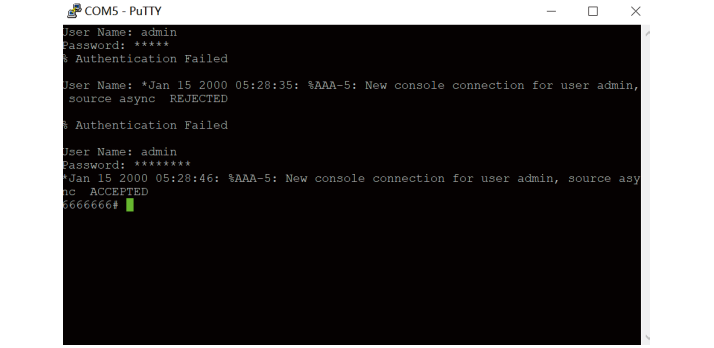


Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

### • Use Telnet to log in to the CLI mode of the switch



Step 1 Configure the IP address of the computer and the IP address of the same segment as the switch  
Step 2 Open the cmd window of the computer  
Step 3 Enter Telnet followed by the management IP address of the switch (for example, if the management IP address of the switch is 192.168.0.1, enter Telnet 192.168.0.1)

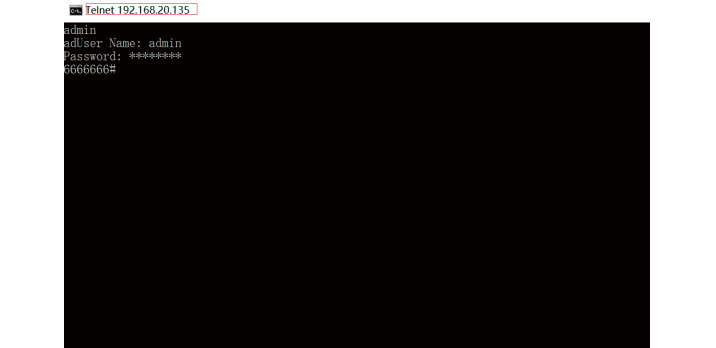

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

## Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you with a new product of the same model.
- If the product defects within the three-year warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.

