



# Quick Installation Guide

Wi-Fi 6 AX3000 Outdoor Wireless Access Point



WI-AP316AX-Lite


www.wireless-tek.com

## 1.Packing Content

- WI-AP316AX-Lite




WI-AP316AX-Lite x 1




Plastic Anchor x 2  
Self-Tapping Screws x 2



Metal Strap x 1



Ethernet Cable x 1



48V Power Adapter x 1  
(Pin: 1,2+, 3,6-)




AC Power Cord x 1



Quick Installation Guide x 1

## 2.Appearance Overview

- WI-AP316AX-Lite

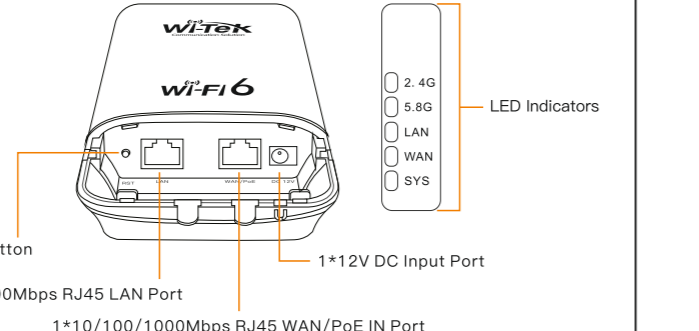

1\*Reset Button  
 1\*10/100/1000Mbps RJ45 LAN Port  
 1\*10/100/1000Mbps RJ45 WAN/PoE IN Port  
 1\*12V DC Input Port

- Port and Button


Item	Description
LAN	10/100/1000Mbps Base-T Ethernet Port
WAN/PoE	10/100/1000Mbps Base-T Ethernet Port, which supports 802.3af PoE Input. If the AP is powered through PoE, please connect this port to the PoE switch.
DC	DC Input:12V, 1.5A The AP is powered through 12V Input
Reset	Reset button, which is used to restore the factory. Holding down the reset button for 8 seconds to reset to factory settings

- LED indicator


LED Indicators	Status	Description
2.4G	ON	The 2.4GHz radio frequency is enabled
	OFF	The 2.4GHz radio frequency is disabled
5.8G	ON	The 5GHz radio frequency is enabled
	OFF	The 5GHz radio frequency is disabled
LAN	ON	The port is connected
	OFF	The port is disconnected
WAN/PoE	ON	The port is connected
	OFF	The port is disconnected
SYS	ON	The system is working normally
	OFF	The device is powered off

## 3.Mounting

Pole Installation

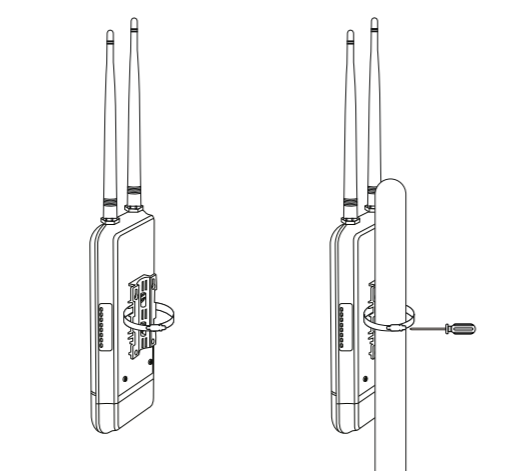


Wall-Mounted Installation

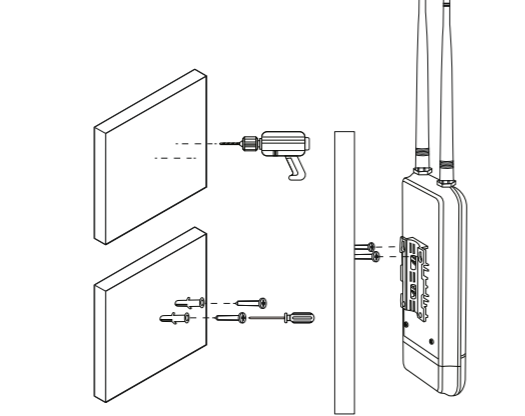


## 4.Power Supply

- Power via PSE Device
- The APs can be powered via PoE switch which supports 802.3af PoE output.

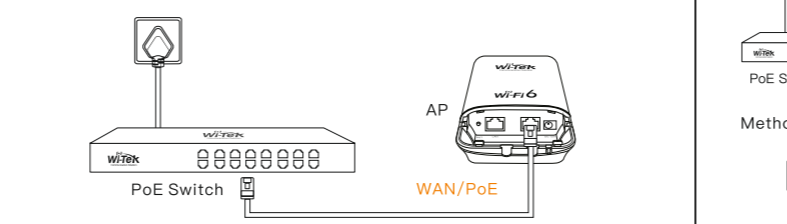

- Power via Power adapter
- The APs can be powered via power adapter which supports 12V DC output.

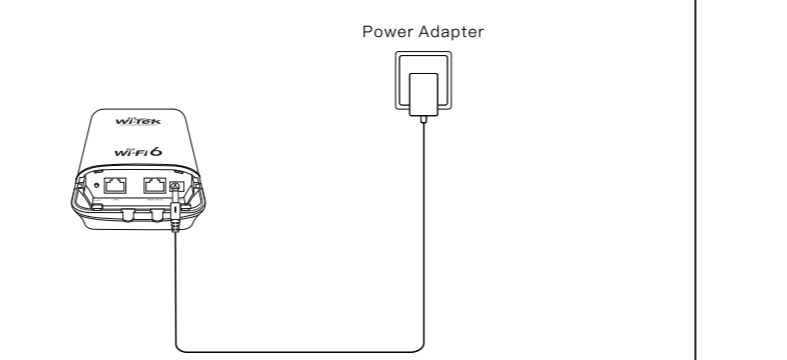


## 5.Configuration Method

Method 1. Connect computer to the wireless signal of AP, the default SSID is "WI-TEK\_XXXX". Password is 88888888




Method 2. Connect computer to the AP by Ethernet cable.

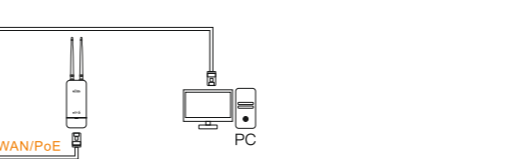

Please connect devices according to the above topology.

Step 1. On the computer, please set the static IP under the same subnet with AP, 192.168.1.xx

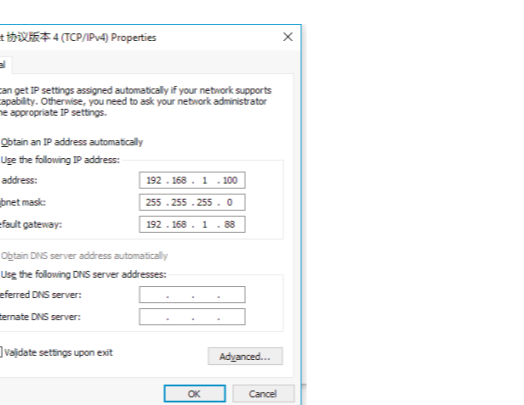


## 6.Cloud Management


Step 2. Please launch a browser such as Google Chrome or Firefox, type 192.168.1.88 into address bar and click on enter to get in the login page of wireless access point. Set the new password.



[Wireless] to setup the access point

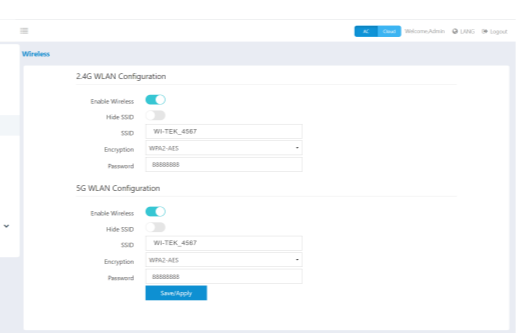

- Fit AP Mode default Login IP:192.168.1.88 admin/admin

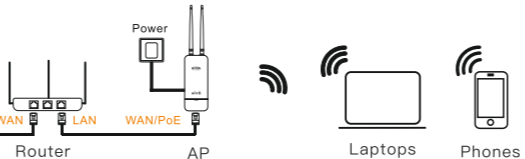

## 7.FAQ

Q1.The LED is not lit.

- A1: Please check the PoE switch is 802.3af/at.
- A2: Make sure the PoE switch is outputting the correct voltage.
- A3: Make sure the Ethernet cable does support PoE function.


Q2. What can I do if the login window does not appear?

- A1: Please check if the computer is the static IP 192.168.1.x.
- A2: Please try another browser.
- A3: Reboot your AP device and try again.
- A4: Disconnect the Internet connection and try again, after login, connect to the internet.

## 8.Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.

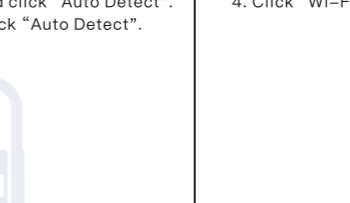

Company Website   Cloud Management   Technical Support

Wireless-Tek Technology Limited  
 Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community,  
 Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.  
 Website: www.wireless-tek.com  
 Tel: 86-0755-32811290  
 Email: sales@wireless-tek.com  
 Technical Support: tech@wireless-tek.com

