




# Quick Installation Guide

Cloud-Managed Wireless In-Wall Access Point

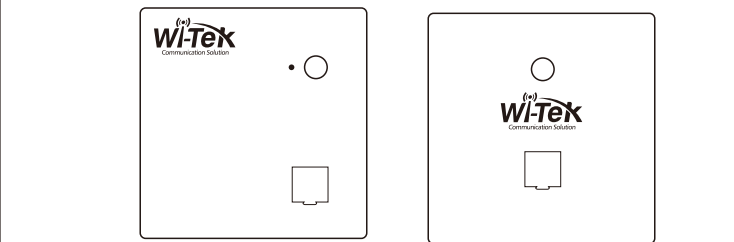


Wi-AP415 | Wi-AP416

www.wireless-tek.com

## 1.Packing Content


Take WI-AP416 as an example

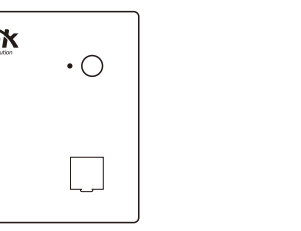

1 x WI-AP-416




2 x Screws

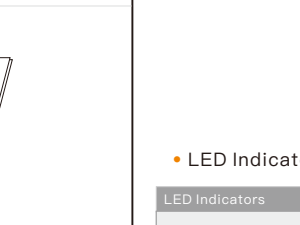


1 x Quick Installation Guide

## 2. Product Appearance

• WI-AP415

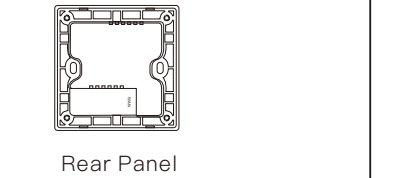

• WI-AP416

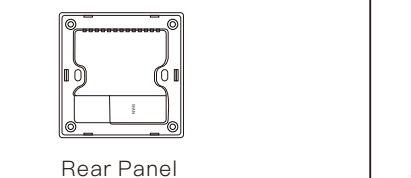

• LED Indicator

LED Indicators	Status	Description
System Indicator	Blinking	The system is starting.
	Solid on	The system is restoring factory.
System Indicator	Solid on	The system is working normally.
	Off	Power off/Working abnormally

## 3.Port and Button

• Port and Button

• For WI-AP415



• For WI-AP416




• Port&Button


Port&Button	Description
RESET	Reset button, which is used to restore the factory. Holding down the reset button for 8 seconds to revert to factory settings.
WAN/PoE	10/100Mbps Base-T Ethernet Port, which supports 802.3af PoE Input. It is generally connected to the upstream switch.
LAN	10/100Mbps Base-T Ethernet port It is generally to connected to wired LAN devices such as PC.

## 4.Network Topology

• Bypass mode topology

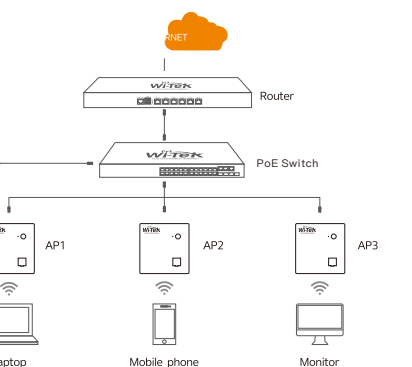


• AC Gateway mode topology

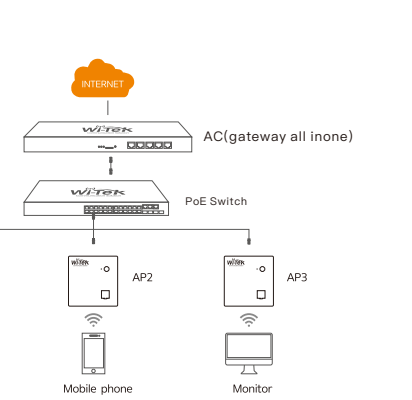


## 5.Device Installation


1. Detach the faceplate of the AP with a screwdriver.

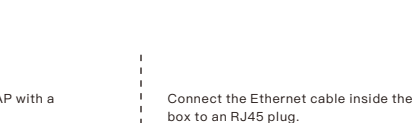

2. Connect the Ethernet cable inside the junction box to an RJ45 plug.

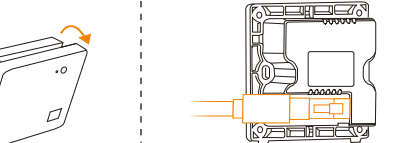

3. Insert the enclosed screws and tighten them with a screwdriver to secure the mounting bracket.

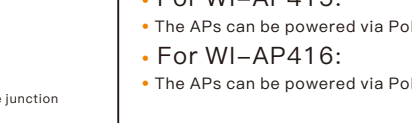

4. Press the faceplate of the AP back into position.



## 6.Power Supply


• Power via PSE Device

• For WI-AP415:

The APs can be powered via PoE switch which supports 802.3af PoE output.


• For WI-AP416:

The APs can be powered via PoE switch which supports 802.3at PoE

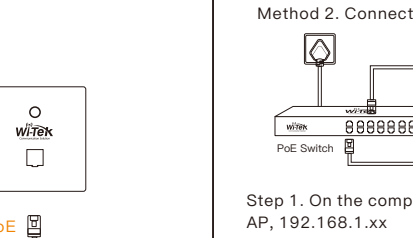


• Power via Power adapter

• The APs can be powered via power adapter which supports 12V DC output.

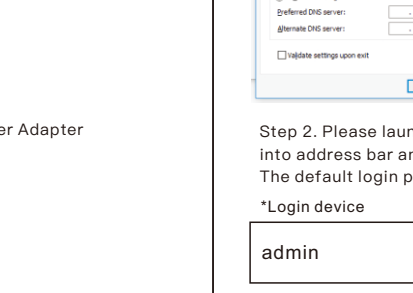

## 7.Configuration Method


Method 1. Connect computer to the wireless signal of AP, the default SSID is "WI-TEK xxxx". Password is 88888888

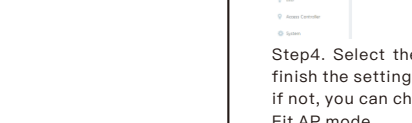


Method 2. Connect computer to the AP by Ethernet cable.



Step 1. On the computer, please set the static IP under the same subnet with AP, 192.168.1.xx

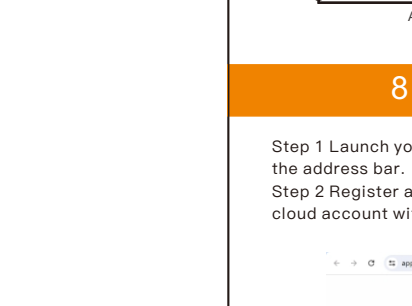

Step 2. Please launch a browser such as Google Chrome or Firefox, type 192.168.1.88 into address bar and click on enter to get in the login page of wireless access point. The default login password is "admin".

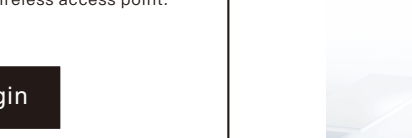


Step3. After get in the management page, On the left side menu, please go to [Wizard] to setup the access point

## 8.Cloud management settings

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.Step 3 log in to the cloud account with the account password after registration.

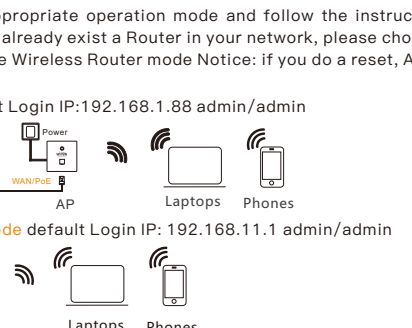

## 9.FAQ

Q1.The LED is not lit.

A1: Please check if the PoE switch is 802.3af/at.

A2: Make sure the PoE switch is outputting the correct voltage.

A3: Make sure the Ethernet cable does support PoE function.

Q2. What can I do if the login window does not appear?

A1: Please check if the computer is the static IP 192.168.1.xxx.

A2: Please try another browser.

A3: Reboot your AP device and try again.

A4: Disconnect the Internet connection and try again, after login, connect to the internet.

## Warranty Card

Username

Address

Telephone No.

Purchase Shop

Purchase Address

Product Model No.

Purchase Time

Serial No.

Dealer Signature

\*If the product defects within three months after purchase, we will provide you a new product of the same model.

\*If the product defects within the three-year warranty period, we will provide the professional maintenance service.

\*Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.

\*Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.

Technical Support

Company Website

Cloud Management

Wireless-Tek Technology Limited

Address: Biaofan Technology Building 402, Bao'an street, Baoan District, Shenzhen City, Guangdong, China

Website: www.wireless-tek.com

Tel: 86-0755-32811290

Email: sales@wireless-tek.com

Technical Support: tech@wireless-tek.com

CE

FC

RoHS

UK

CA

CCC